


Owner's Manual Supplement

260 Overnighter

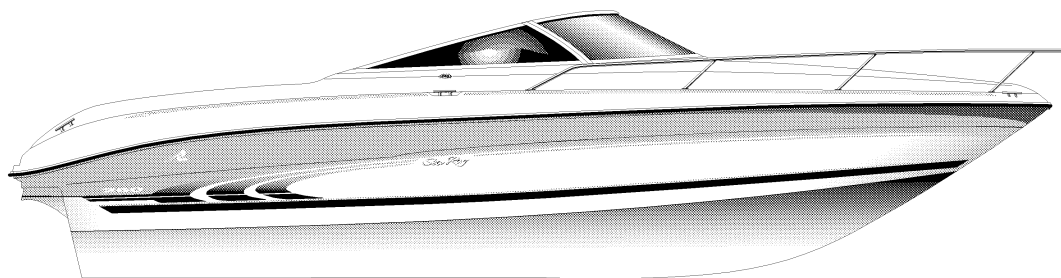

Sea Ray®

Sea Ray® 260 Overnighter Owner's Manual Supplement • MRP #1013903
Printed in the U.S.A. November 1997, Reprinted January 2000, Revised April 2000, May 2002 • © Sea Ray Boats, Inc.
Sea Ray Boats, Inc. 2600 Sea Ray Blvd., Knoxville, TN 37914.
For information call 1-800-SRBOATS. or fax 1-314-213-7878
Internet address: <http://www.searay.com>

Note: Not all accessories shown in pictures or described herein are standard equipment or even available as options.
Options and features are subject to change without notice.

INTRODUCTION & TABLE OF CONTENTS

This owner's manual supplement has been written to provide additional specific information about your boat and should be read carefully. Keep this booklet with the owner's manual in the owner's manual packet.

The owner's manual packet has been compiled to help you to operate your craft with safety and pleasure. It contains details of the craft, the equipment supplied or fitted, its systems and information on its operation and maintenance. Please read the information in it carefully, and familiarize yourself with the craft before using it.

If this is your first craft, or you are changing to a type of craft you are not familiar with, for your own comforts and safety, please ensure that you obtain handling and operating experience before "assuming command" of the craft. Your dealer or yacht club will be pleased to advise you of local sea schools, or competent instructors.

PLEASE KEEP THIS OWNER'S MANUAL PACKET IN A SECURE PLACE, AND HAND IT OVER TO THE NEW OWNER WHEN YOU SELL THE CRAFT.

Warranty Information	4	Fire Extinguishing System	11
Construction Standards	4	Fire Extinguisher Discharge Port	11
Hull Identification Number	4	Anchoring	12
Servicing Your Sea Ray®	4	Anchoring Arrangement	12
General Arrangements & Dimensions	5	Life Saving Equipment (PFD)	12
Seating Plan Options	6	Boat Storage	12
Accessory Locations	6	Troubleshooting	13
General Information	7	List of Reference Manual and Drawings	13
Bilge Pumping System	7	Repair and Parts Facilities	13
Propulsion System	7	Docking / Lifting / Trailering	13
Propellers	7	Canvas	14
Head System (Option)	8	Canvas Care & Maintenance	14
Fuel System	8	Installation Tips	15
Water System	8	Trailering With Canvas	15
Exhaust System	9	Bilge Layout	16
Corsa™ Thru-Hull Exhaust System (Option)	9	Dash Panel Layout	17
Engine Cooling System	9	Location Of Through-Hull Fittings	18
Electrical Installations	9	Wire Harness Installation	19
Battery	10	DC Wiring Diagram	20-21
Steering System	10	Wire Harness Construction	22
Ventilation System / Bilge Blower	10	International Homologations	23
Trim Tabs (Option)	11		
Refrigerator (Option)	11		
12 Volt Receptacle	11		

(This book contains 23 pages.)



Information in this publication is based upon the latest product specifications available at printing. Sea Ray® Boats, Inc. reserves the right to make changes at any time, without notice, in the colors, equipment, specifications, materials and prices of all models, or to discontinue models. Should changes in production models be made, Sea Ray® is not obligated to make similar changes or modifications to models sold prior to the date of such changes.

The following are registered trademarks of the Brunswick Corporation: Sea Ray®, The SR Wave Logo.

WARRANTY INFORMATION

Sea Ray's® warranty is better than ever. Find the warranty information card in your owner's manual packet for complete details. If for some reason the card is missing, contact your Sea Ray dealer for a new one.


CONSTRUCTION STANDARDS

Sea Ray's® commitment - Excellence by Design - has enabled us to create a superior craft providing you with comfort, performance, safety and dependability. All our boats comply with the safety standards set by the United States Coast Guard and are designed, engineered and manufactured in accordance with applicable recommendations and guidelines of the American Boat and Yacht Council (ABYC) certified by the National Marine Manufacturers Association (NMMA).

HULL IDENTIFICATION NUMBER (HIN)

The “**Hull Identification Number**,” located on the starboard side of the transom, is the most important identifying factor and must be included in all correspondence and orders. Failure to include it only creates

delays. Also of vital importance are the engine serial numbers and part numbers when writing about or ordering parts for your engine. Refer to the engine owner's manual for locations.

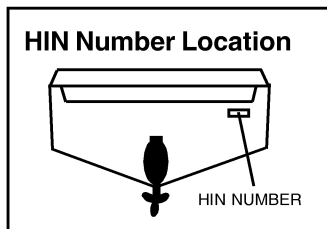

SERVICING YOUR SEA RAY®

When your boat needs service beyond regular maintenance it should be taken to an authorized Sea Ray® dealer.

To find a dealer in your area call:

1-800-SRBOATS.


Fax: 1-314-213-7878

If a problem is not handled to your satisfaction:

1. Discuss any warranty-related problems directly with the service manager of the dealership or your sales person. Give the dealer an opportunity to help the service department resolve the matter for you.
2. If a problem arises that has not been resolved to your satisfaction by your dealer, contact Sea Ray® Boats at 1-800-SRBOATS and the appropriate customer service department information will be provided for you.

GENERAL ARRANGEMENTS & DIMENSIONS

PROFILE
(FIG. 5.1)

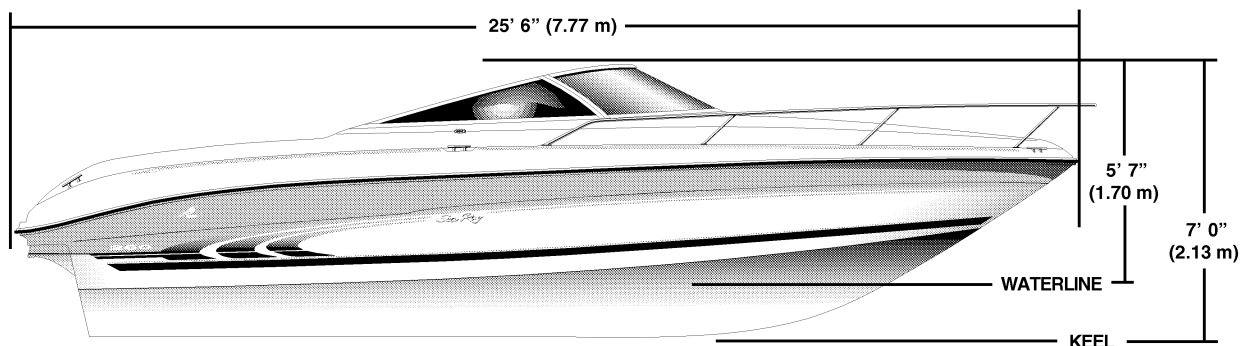


260 OVERNIGHTER – SPECIFICATIONS

Overall Length	25' 6" (7.77 m)
Beam	8' 6" (2.59 m)
Draft (Stern Drive Down)	38" (96.5 cm)
Draft (Stern Drive Up)	23" (58 cm)
Dry Weight (Lbs.)	5,000 (2,268 kg)
Fuel Capacity (Gallons)	75 gal (283.9 liters)
Usable Fuel (Gallons)	71 gal (269 liters)
Water Capacity	10 gal (37.9 liters)
Dead Rise	19.5°
System Voltage	12 VDC
Battery Capacity	Dealer Installed

HEIGHT DIMENSIONS


Waterline To Top Of Windshield	5' 7" (1.70 m)
Keel To Top Of Windshield	7' 0" (2.13 m)

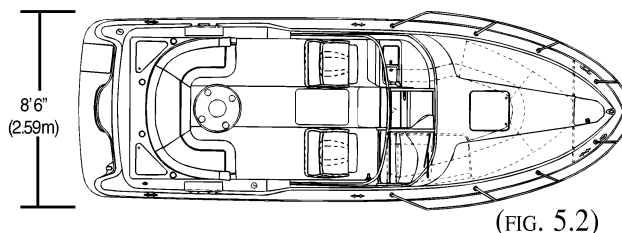


(FIG. 5.2)

The specification measurements and locations are approximations and subject to variance.


SEATING PLAN OPTIONS (INTERIOR PLAN)

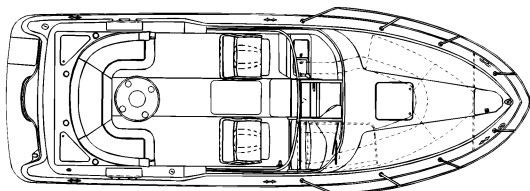


260 OVERNIGHTER • STANDARD SEATING PLAN
Swivel Bucket Helm Seats w/Sliders & Vertical Adjustment on Starboard Side, Circular Aft Seating w/Electrically Actuated Bilge Hatch (fig. 6.1)

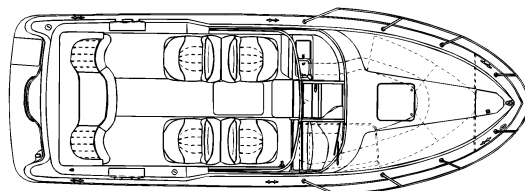


260 OVERNIGHTER • OPTIONAL SEATING PLAN #1
Adjustable Back-to-Back Lounge Seats w/Fiberglass Storage Bases, Aft Jump Seats (Forms Sun Pad), Hinged Fiberglass Motorbox & Aft Seating Unit w/Gas Assist Lifts (fig. 6.2)

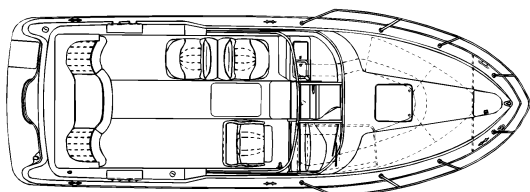

260 OVERNIGHTER • OPTIONAL SEATING PLAN #2
Swivel Bucket Helm Seat w/Slider & Vertical Adjustment (Starboard), Adjustable Back-to-Back Lounge Seat w/Fiberglass Storage Base (Port), Aft Jump Seats (Forms Sun Pad), Hinged Fiberglass Motorbox & Aft Seating Unit w/Gas Assist Lifts (fig. 6.3)

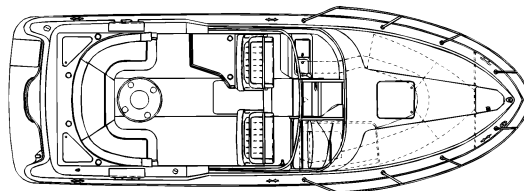


260 OVERNIGHTER • OPTIONAL SEATING PLAN #3
Custom Double Helm Seat w/Flip-up Thigh Rise w/Fiberglass Storage Base (Port & Stbd), Circular Aft Seating w/Electrically Actuated Bilge Hatch (fig. 6.4)

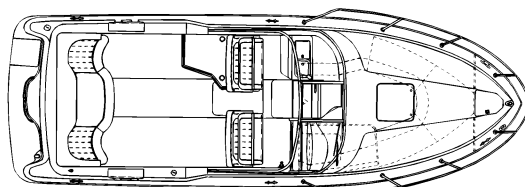

260 OVERNIGHTER • OPTIONAL SEATING PLAN #4
Custom Double Helm Seat w/Flip-up Thigh Rise w/Fiberglass Storage Base (Port & Stbd), Aft Jump Seats (Forms Sun Pad), Hinged Fiberglass Motorbox & Aft Seating Unit w/Gas Assist Lifts (fig. 6.5)

SEATING PLAN #4 SHOWN
(FIG. 6.6)

ACCESSORY LOCATIONS

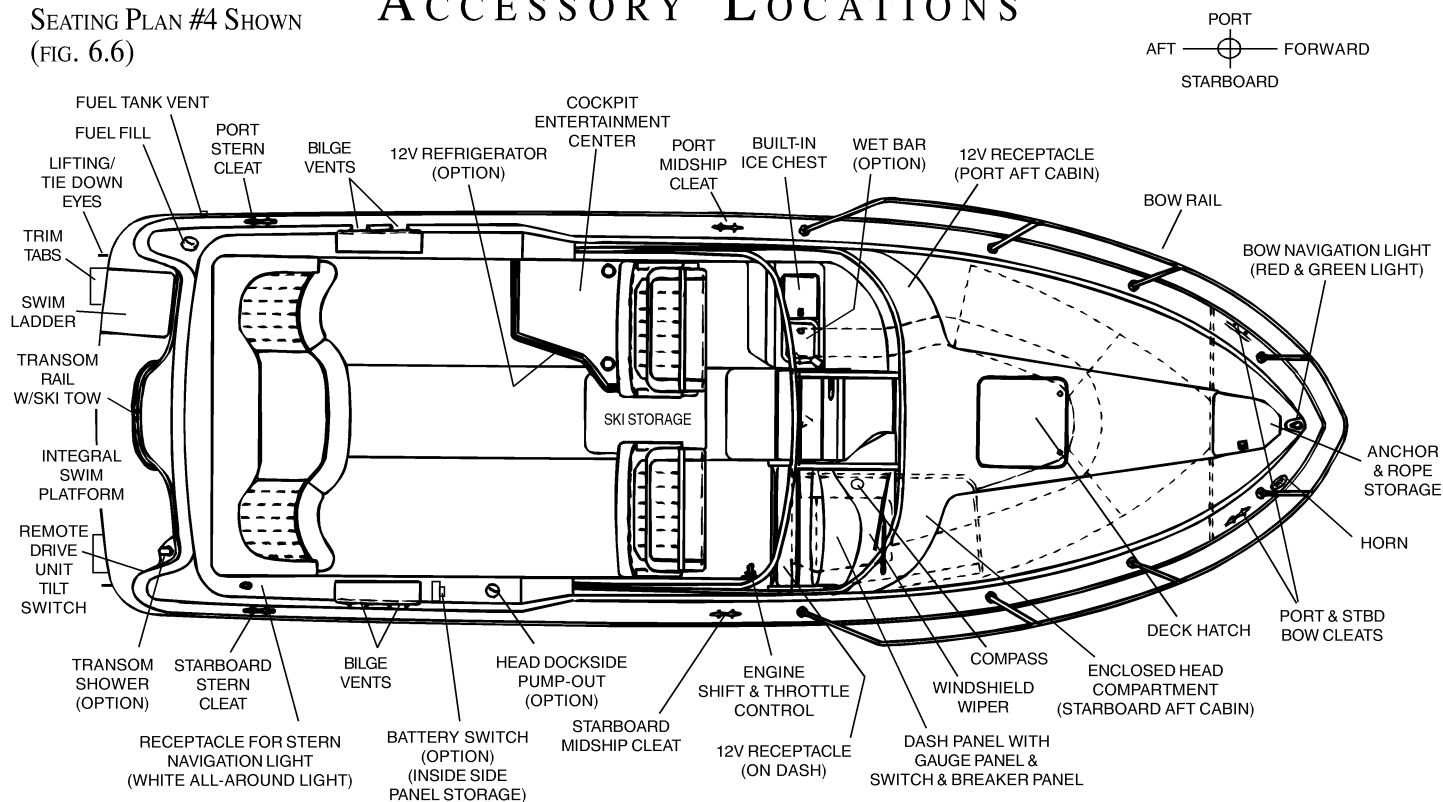


GENERAL INFORMATION

BILGE PUMPING SYSTEM



Your boat is equipped with an automatic electric bilge pumping system consisting of a bilge pump with float switch. The pump is protected by 4 amp fuse located in the bilge (see fig. 21.2).

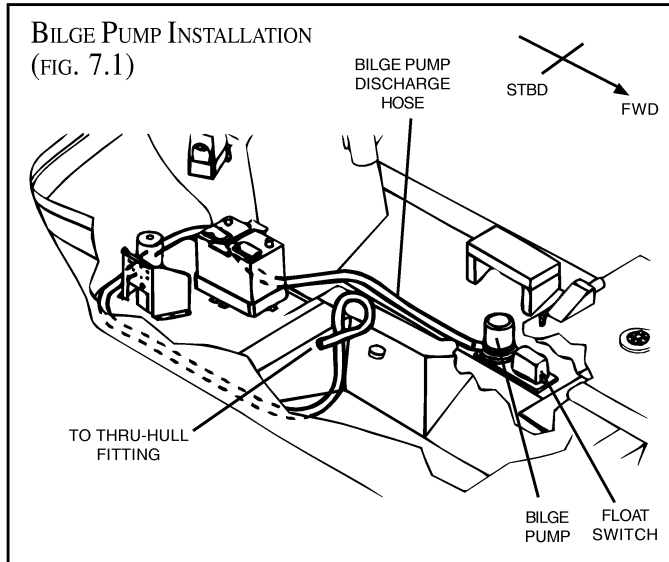


The bilge pump is equipped with a switch on the dash with a “MANUAL” and “AUTO” position. When the switch is in the “MANUAL” position, the pump will run continuously. When in the “AUTO” position, the pump is activated when there is enough water in the bilge to raise the float switch to its highest position; and deactivated when the water recedes. **The pump should NOT be left in the “MANUAL” mode unless the bilge is being pumped out for servicing.**

Frequently inspect the area under the pumps and float switches to ensure they are free from debris and gummy bilge oil.


REFER TO THE OWNER'S MANUAL AND OWNER'S PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.

 PROPULSION SYSTEM



The 260 Overnighter is equipped with a stern drive type propulsion system also known as an inboard-outboard engine. This type of propulsion system has the engine secured to the hulls stringers at the aft end of the hull and covered by an engine box. The drive unit, also called the lower unit because it hangs below the hull, is the part of the propulsion system that attaches to the outside of the hull or transom. The drive unit pivots to steer the boat.

REFER TO THE OWNER'S MANUAL AND ENGINE OWNER'S MANUAL FOR OPERATING INSTRUCTIONS AND WARRANTY INFORMATION.

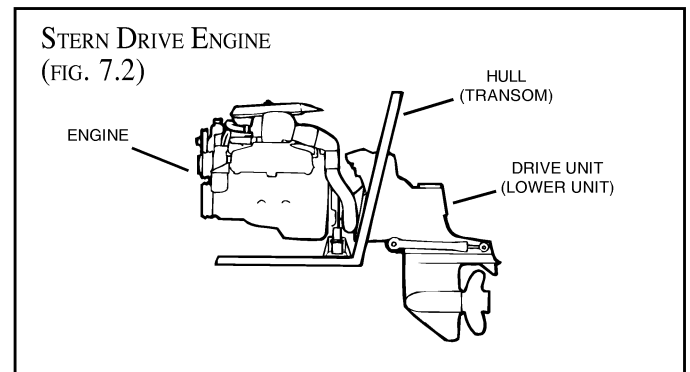

PROPELLERS

Your Sea Ray® has been equipped with a propeller which our tests have shown to be the best suited for general use under normal conditions and load. In some situations you may wish to change propellers to give your boat slightly different performance characteristics. In general, changing to a lower pitch propeller will increase acceleration and load-pulling ability, but with a slight decrease in top speed. Conversely, moving to a higher pitch propeller will attain higher top speed with a light load, but will sacrifice acceleration and power. Your particular requirements should be discussed with your Sea Ray® dealer.

Under no circumstances use a propeller which allows the engine to operate at higher than recommended RPM.

GENERAL INFORMATION


HEAD SYSTEM (OPTIONAL)

There are two (2) optional head systems available for your Sea Ray® 260 Overnighter. The owner's manual packet in your boat contains information pertaining to your optional head system that should be carefully read.

⚠ CAUTION

Do not place facial tissue, paper towels or sanitary napkins in head.

PUMP-OUT HEAD (OPTION) (FIG. 8.1)

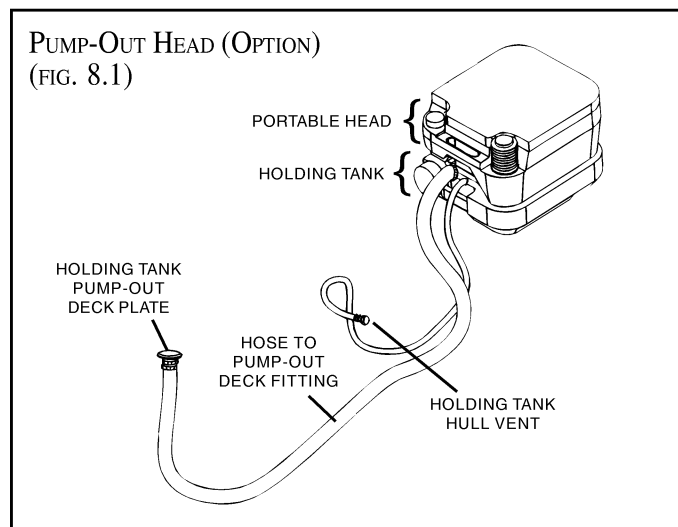

FUEL SYSTEM




The owner's manual general information contains important fueling information. Take time to read all the fuel related information in the owner's manual.

The 260 Overnighter standard gasoline fuel system consists of a 75 gallon (283.9 liter) fuel tank, fuel tank vent, an anti-siphon valve, engine fuel supply line and fuel fill (see fig. 8.2).

The fuel tank vent serves as a pressure/vacuum release and safety overflow. The fuel vent is located on the port side of the hull. Periodically check the vent to assure that it is not clogged.

The gasoline engine fuel pick-up at the fuel tank has an anti-siphon valve to prevent fuel from siphoning out in the event of fuel line failure.


FUEL SYSTEM (FIG. 8.2)

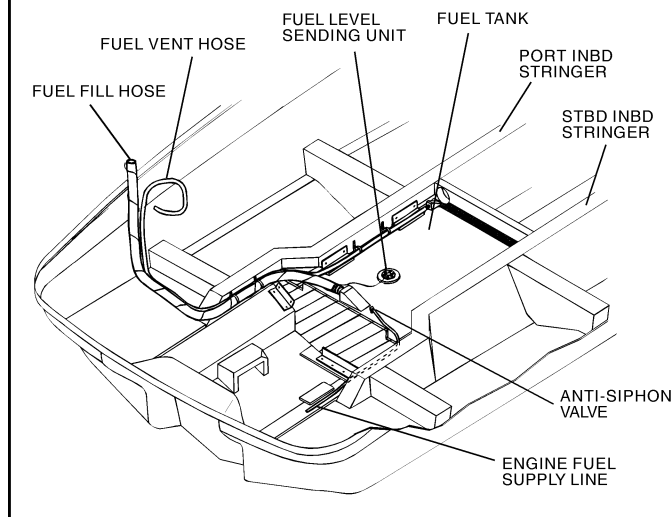

⚠ CAUTION

Never start an engine until you are certain that fuel fumes are not present in engine compartment or elsewhere in the boat.

 
WATER SYSTEM



The fresh water system is activated by the WATER SYSTEM switch on the dash. The switch must be ON to operate the faucet or transom shower.

1. With tank empty, mix a solution of Clorox or Purex household bleach (5% Hypochlorite solution) using 2 oz. per gallon of tank capacity. Fill tank with water.

WATER SYSTEM (FIG. 8.3)

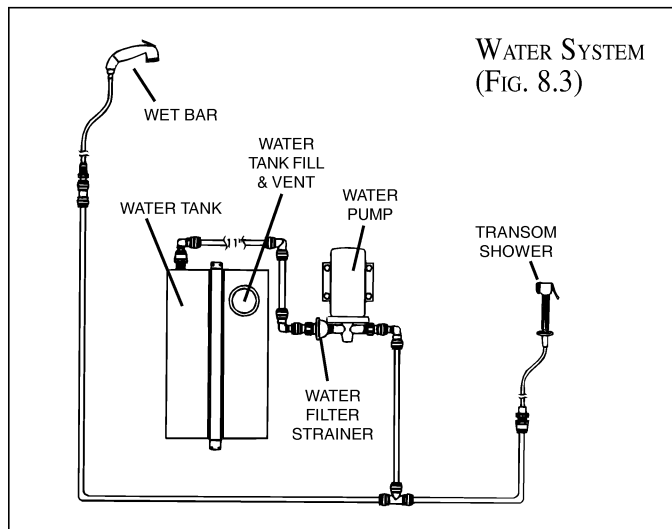


GENERAL INFORMATION

To begin initial operation:

1. Fill the water tank from a source known to provide safe, pure drinking water by removing the cap on the tank.
2. Turn ON the WATER SYSTEM or ACCESSORY switch.
3. Open faucet or turn on shower wand.

Shut faucet/shower off as flow becomes steady and free of air. Shutting off the faucet/shower will cause the pump to shut off.

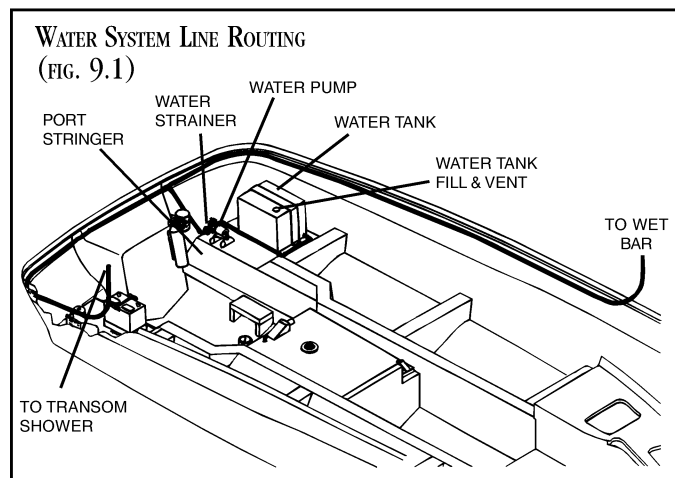

activated that pull the valves open (exhaust vents through the transom). When turned off or closed, exhaust is vented through the prop under the water.

REFER TO OWNER'S PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.

ENGINE COOLING SYSTEM

The engine cooling system is an integral part of the propulsion system.

REFER TO THE ENGINE OWNER'S MANUAL FOR INSTRUCTIONS AND WARRANTY INFORMATION.

ELECTRICAL INSTALLATIONS

This owner's manual supplement contains electrical schematics for your boat. These electrical schematics were generated by technicians at the engineering division for technical reference and service technicians. Sea Ray® does not recommend that you attempt to work on the boats electrical system yourself, instead we recommend that you take your boat to your authorized Sea Ray® dealer for service. Sea Ray® reserves the right to change or update the electrical system on any model at any time without notice to the consumer and is NOT obligated to make any updates to units built prior to changes.

EXHAUST SYSTEM

The 260 Overnighter exhaust system is an integral part of the propulsion system.

REFER TO THE ENGINE OWNER'S MANUAL FOR INSTRUCTIONS AND WARRANTY INFORMATION.

CORSA™ THRU-HULL EXHAUST SYSTEM (OPTION)

 
This boat may be equipped with Corsa™ Captain's Call™ Exhaust Diverters that provide flexibility with the thru-hull exhaust system. You can enjoy the bold sound and added performance of an open exhaust on the water while being a "quiet neighbor" in the marina or when noise restrictions are enforced. Exhaust flow can be directed through the transom or the prop with the simple flick of a switch.

Operation

An auxiliary switch is located at the helm to open and close the diverters. When turned on, heavy duty solenoids are

GENERAL INFORMATION

BATTERY



Refer to the *Sea Ray® Operational and Safety Manual* for battery disconnect and maintenance.

ALWAYS DISCONNECT BATTERY CABLES BEFORE DOING ANY WORK ON THE ENGINE'S ELECTRICAL SYSTEM OR ALTERNATOR WIRING TO PREVENT ARCING OR DAMAGE TO THE ALTERNATOR.

CAUTION


While the engine is running the battery terminal clamps must not be loosened or detached nor should the battery switch(es) be turned off, otherwise the alternator and other electronic units will be damaged.

DANGER


- Never use an open flame in the battery storage area.
- Avoid striking sparks near the battery.
- A battery will explode if a flame or spark ignites the free hydrogen given off during charging.

NOTE: The bilge pump and stereo memory CANNOT be turned OFF with the battery switch. The entire remaining DC system CAN be turned OFF with the battery switch.

BATTERY CABLE ROUTING (FIG. 10.1)

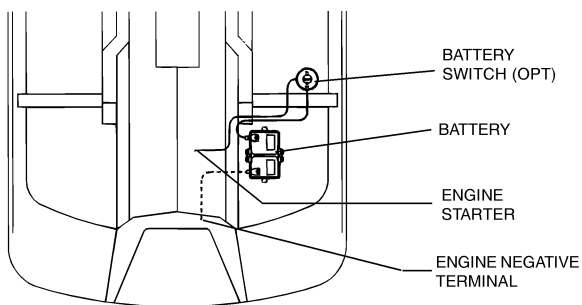

BATTERY CABLE ROUTING
(WITH DUAL BATTERY OPTION)
(FIG. 11.2)

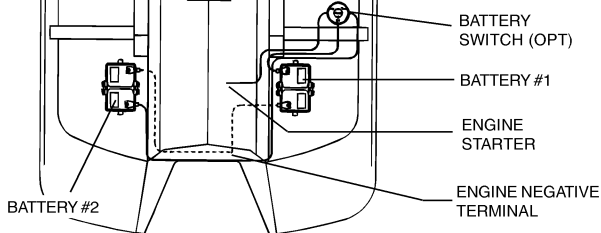

STEERING SYSTEM

The 260 Overnighter is equipped with a power steering system.


REFER TO THE ENGINE OWNER'S MANUAL IN THE OWNER'S PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.

VENTILATION SYSTEM/BILGE BLOWER



Sea Ray® Sport Boats are equipped with an electric bilge blower to remove fumes from the engine compartment and provide ventilation through the deck vents before starting the engine and when operating below cruising speeds. The bilge blower is located on the port side of the transom.

BILGE BLOWER INSTALLATION
(FIG. 10.2)

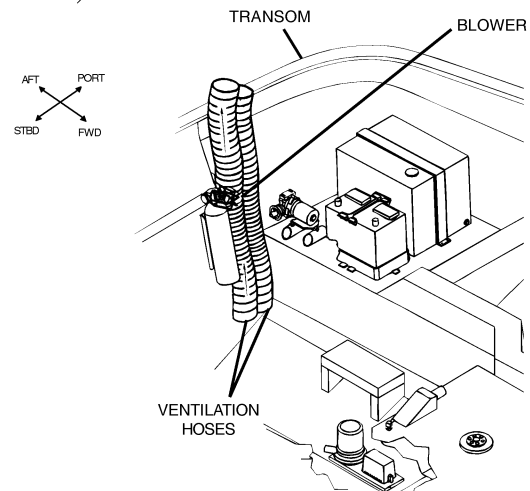

REFER TO OWNER'S MANUAL AND OWNER'S PACKET FOR OPERATING INSTRUCTIONS AND SAFETY PRECAUTIONS.


GENERAL INFORMATION

TRIM TABS (OPTION)



The trim tabs on your Sea Ray® are operated with a rocker type momentary switch on the dash. They are protected by a circuit breaker on the helm switch panel which must be ON to use the trim tabs. (see owner's manual for more information and fig.16.1 for hydraulic pump location.)

DETAILED OPERATING INSTRUCTIONS AND WARRANTY INFORMATION ARE PROVIDED BY THE EQUIPMENT MANUFACTURER AND CAN BE FOUND IN THE OWNER'S PACKET.

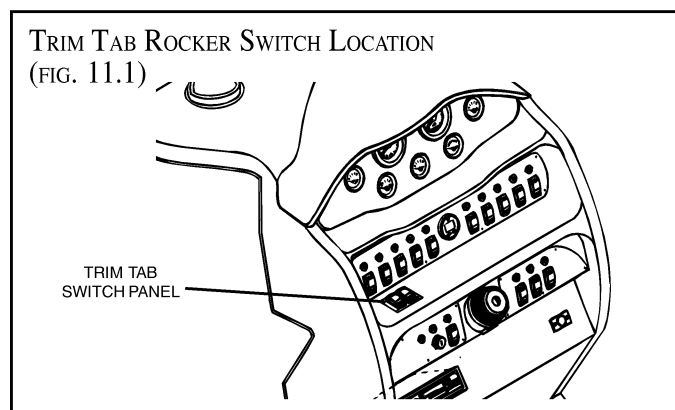

REFRIGERATOR (WITH OPTIONAL SEATING PLANS #3 & #4)

The refrigerator operates on the 12 volt DC system.

 
To operate:

1. (If equipped), Turn on the battery switch.
2. Turn on the switch located inside the refrigerator.
3. Turn on the Refrigerator switch on the dash panel.

The refrigerator is protected by a 15 amp breaker on the dash. DO NOT COVER THE REFRIGERATOR VENTS.

DETAILED OPERATING INSTRUCTIONS AND WARRANTY INFORMATION ARE PROVIDED BY THE EQUIPMENT MANUFACTURER AND CAN BE FOUND IN THE OWNER'S PACKET.

12 VOLT RECEPTACLE



The 260 Overnighter is equipped with a 12 volt power receptacle on the aft port side of the cabin and on the dash. Use these receptacles to power a 12 volt phone charger, portable TV or any other 12 volt device. The receptacle is protected by a breaker on the dash switch panel (see fig. 17.4).


FIRE EXTINGUISHING SYSTEM



The 260 Overnighter is offered with the optional automatic fire extinguishing system. If your boat is not equipped with this option you must carry an approved fire extinguisher.

REFER TO THE OWNER'S MANUAL AND OWNER'S PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.

FIRE EXTINGUISHER DISCHARGE PORT

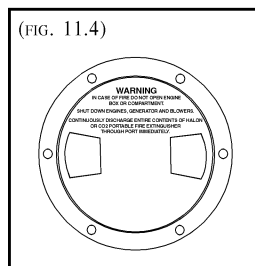


Inboard/Outboard sport boats not equipped with the automatic fire extinguisher option are equipped with a fire extinguisher discharge port. In the event of a fire, the access plate on the engine compartment can be removed to allow the operator to discharge a fire extinguisher into the engine compartment without having to open the engine compartment. Do not open the engine compartment immediately! This feeds oxygen to the fire and flashback could occur.

WARNING


- In case of fire DO NOT open engine box or compartment.
- Shut down engines, generator and blowers.
- Continuously discharge entire contents of portable fire extinguisher through port immediately.

GENERAL INFORMATION

 FIRE EXTINGUISHER DISCHARGE PORT LOCATIONS (FIG. 12.1)




UNDER CENTER CUSHION

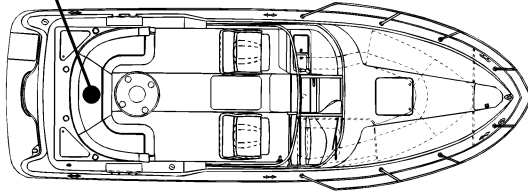


STANDARD SEATING PLAN

ON PORT SIDE OF ENGINE BOX

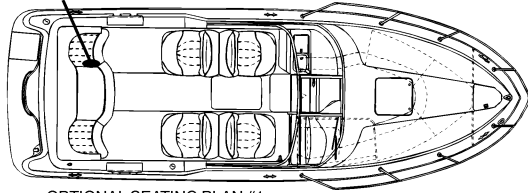


OPTIONAL SEATING PLAN #1

ON PORT SIDE OF ENGINE BOX

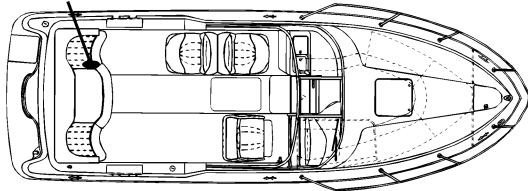


OPTIONAL SEATING PLAN #2

UNDER CENTER CUSHION

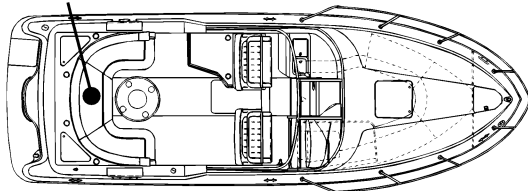

OPTIONAL SEATING PLAN #3

ON PORT SIDE OF ENGINE BOX

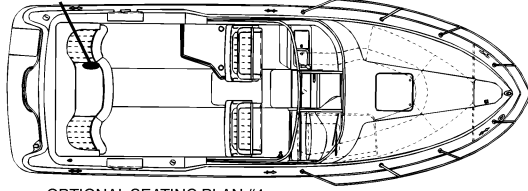

OPTIONAL SEATING PLAN #4

ANCHORING




To anchor, bring the bow into the wind or current and put the engine in neutral. When the vessel comes to a stop, lower, do not throw, the anchor over the bow. The anchor line should be 5 to 7 times the depth of water.

ANCHORING ARRANGEMENT

The 260 Overnighter is equipped with an anchor storage hatch with an anchor storage cradle inside. Stow the anchor in the cradle when not in use. Note: Before using the anchor be sure the anchor line is secured to the boat – to the bow eye or bow cleat.

(FIG. 12.2)

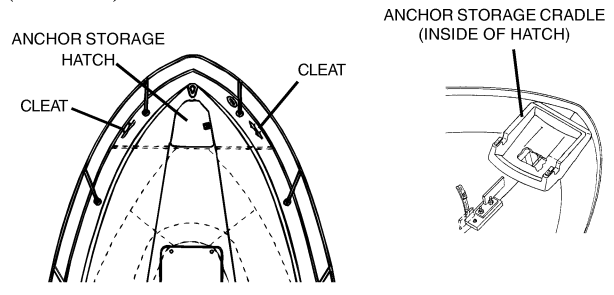

LIFE SAVING EQUIPMENT (PERSONAL FLOTATION DEVICE [PFD])

STORAGE: The 260 Overnighter offers storage under the cockpit floor storage and under the cabin cushions.

OPERATION: Wear PFD according to manufacturer recommendations. See pamphlet *Federal Requirements And Safety Tips For Recreational Boats* in the owner's packet or get one from your dealer.

MAINTENANCE: Rinse with fresh water and let dry thoroughly. Do not store in a damp compartment. Avoid the possibility of mildew.

BOAT STORAGE

WET STORAGE PROCEDURES: Special care for boats that are moored: If permanently moored in salt water or fresh water, your boat will collect marine growth on its bottom. This will detract from the boat's beauty and greatly affect its performance. There are two methods of preventing this:

- Periodically haul the boat out of the water and scrub the bottom with a bristle brush and a solution of soap and water.
- Paint the hull below the waterline with a good grade of antifouling paint. DO NOT paint the engine drive surfaces.

GENERAL INFORMATION

NOTE: There are EPA regulations regarding bottom paint application. Consult your marine paint dealer for proper application methods.

SECURITY CONSIDERATIONS: Be conscious of the security of your boat. Always remove the key from the ignition, store your boat in a secure place, put a lock on the trailer and if location permits chain your trailer to a pole or other permanently fixed object.

TROUBLESHOOTING

LIST OF REFERENCE MANUALS AND DRAWINGS

PERFORMANCE: Refer to the owner's manual.


ENGINE: Refer to the owner's manual and/or the engine owner's manual.

ELECTRICAL: Refer to electrical section of the owner's manual and electrical schematics in this owner's manual supplement. Only a qualified marine electrical technician may service the boat's electrical system.

REPAIR AND PARTS FACILITIES

To find a Sea Ray® dealer in your area, call: Sea Ray® Customer Service: 1-800-SRBOATS
FAX: 1-314-213-7878

To find repair and parts facilities for equipment installed on your boat, refer to the original equipment manuals (OEM's) found in the owner's manual packet.

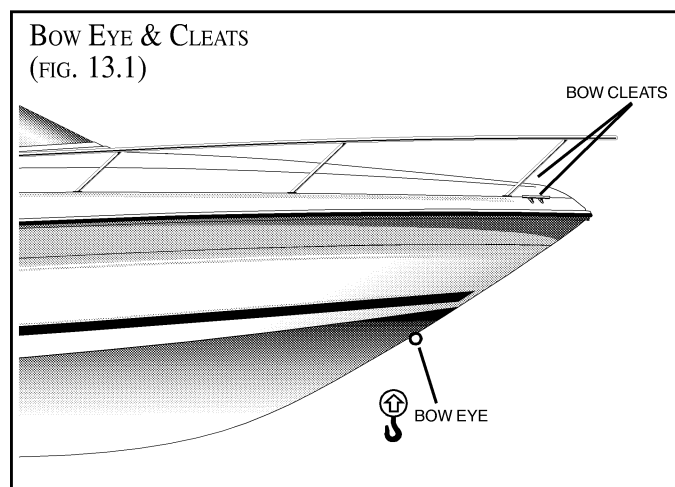

DOCKING/LIFTING/TRAILERING


CLEATS: Cleats must not be used for lifting the boat, they are intended for mooring use only.

BOW AND STERN EYES: The bow eye should be used to haul the boat onto a trailer. The stern eyes should be used as tie down points for trailering the boat. The bow and stern eyes may be used for short term lifting of the boat such as for service. Long term lifting with the bow and stern eyes may cause stress on the fiberglass and gel coat.



For long term storage use flat, wide belt-type slings and spreaders long enough to keep pressure from gunwales. Do not place slings where they may lift on underwater fittings.

REFER TO THE ENGINE OWNER'S MANUAL IN THE OWNER'S PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.

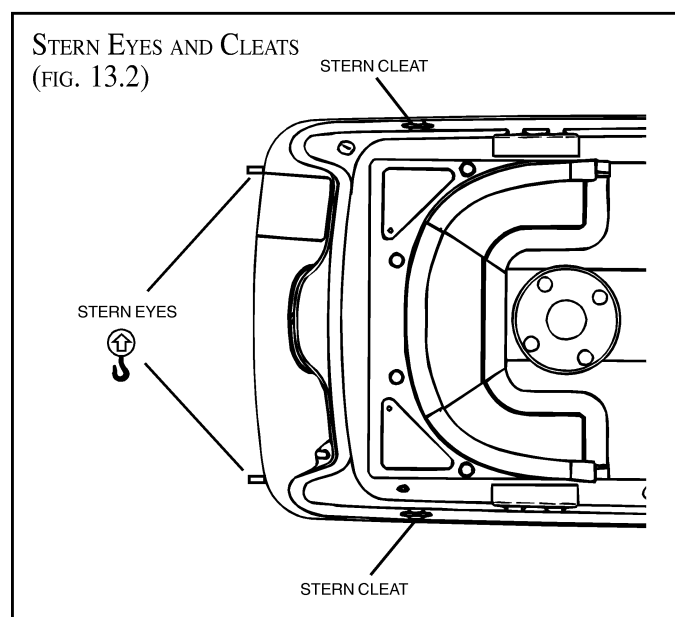

CANVAS INFORMATION

CANVAS

REFER TO OWNER'S MANUAL PACKET FOR CANVAS MANUFACTURER INSTRUCTIONS AND WARRANTY INFORMATION.

Sea Ray's® commitment to boating safety will refer you to the Owner's Operational and Safety Manual located in the Owner's Packet. One area in particular is *Exhaust Emissions* and *Emergency Procedures*. Read and understand the effects of carbon monoxide and how to ventilate your Sport Boat to prevent the built-up of this invisible gas.

Attached to the inside of the bimini top is a DANGER tag for Carbon Monoxide Gas (CO) buildup and a WARNING tag for excessive speeds while canvas is installed. The Aft Curtain also has a WARNING tag stating "The Aft Curtain is not designed to be used while engine is running or boat is underway". If your canvas does not have these tags, become lost or are unable to be read, contact your dealer for replacement labels.

! DANGER
EXHAUST FUMES FROM ENGINES
CONTAIN DEADLY
CARBON MONOXIDE GAS (CO)
BOATS WITH CANVAS OR POOR
VENTILATION ARE MOST LIKELY TO
COLLECT FUMES. CO SICKNESS
SYMPTOMS INCLUDE HEADACHES,
NAUSEA AND DIZZINESS. DO NOT
MISTAKE FOR SEA SICKNESS.
VENTILATE BOAT. SEE BOAT OWNER'S
MANUAL FOR MORE DETAILS.

! WARNING
SUNSHADE SHOULD
NOT BE USED WHEN
VESSEL SPEED EXCEEDS
45 MPH

! WARNING
THE AFT CURTAIN IS NOT
DESIGNED TO BE USED
WHILE ENGINE IS RUNNING
OR BOAT IS UNDERWAY

The Canvas manufacturer has provided the canvas piece name, and position on each canvas piece with a sewn on white label. Do not remove these tags. They will help you with identification and position for easier installation procedures.

It is recommended you decide which canvas pieces you want to remove or install before you leave the boat slip or off load your Sport Boat from the trailer into the water. Removing or installing canvas on the water could be difficult as not all water conditions allow for your stability while attempting removal or installation.

Your Sea Ray® Sport Boat standard canvas set consists of the following pieces:

Sunbrella® Bimini Top with Boot

Canvas options available consist of the following pieces:

Bimini Canvas Package:

- 1 Front Curtain
- 2 Side Curtains
- 1 Aft Curtain
- 1 Canvas Storage Bag

Camper Canvas Package:

- 1 Bimini Front Curtain
- 2 Side Curtains
- 1 Camper Top & Boot
- 1 Camper Aft Curtain
- 1 Canvas Storage Bag

Cockpit Cover
Hatch Cover

Storage:

- **Do not fold or store any of the canvas set pieces while wet.** All canvas should be rolled or folded when dry and stored in a clean, dry place.
- For clear vinyl pieces, the recommended methods for storage are rolling or laying down flat. The clear vinyl should never be folded or creased as cracking will result. To protect the clear vinyl from rubbing against itself while rolled or stored flat, place a piece of very soft, non abrasive cloth between the pieces. If the surface of the clear vinyl becomes scratched, the canvas manufacturer has provided a canvas care sheet located in your Owner's Manual Packet.
- When storing the aft curtain, fold the canvas over the clear vinyl window (do not fold clear vinyl), then roll or store flat.


CANVAS CARE & MAINTENANCE

The fabric should be cleaned regularly before substances such as dirt, pollen, etc. are allowed to accumulate on and become embedded in the fabric. The fabric can be cleaned without being removed from the installation. Simply brush off any loose dirt, roof particles, etc.; hose down and clean with a mild solution of a natural soap in lukewarm water (no more than 100° F., 38° C) Rinse thoroughly to remove soap. **DO NOT USE DETERGENTS.** Allow to completely air dry.

Sport Boat Canvas Placement

(Note: Your Sport Boat May Not Be Equipped With All Of The Canvas Shown)


(fig. 14.1)

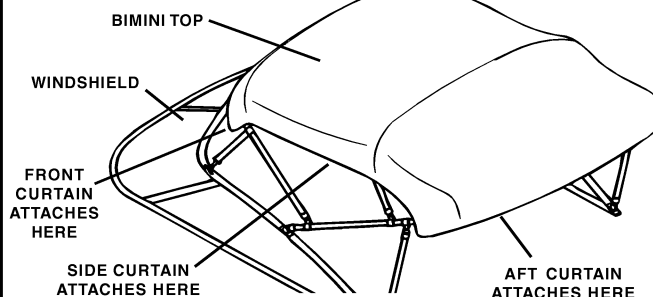

Sport Boat Canvas Placement

(Note: Your Sport Boat May Not Be Equipped With All Of The Canvas Shown)

(fig. 14.2)

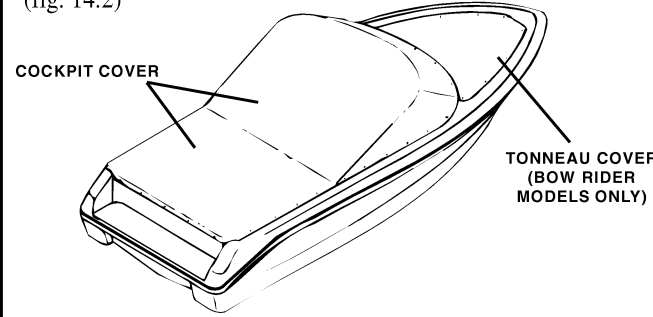

CANVAS INFORMATION


If you have stubborn cleaning cases, call your dealer for proper procedures. Do not try your own cleaning procedures as they may void any warranties.

After each use, especially in salt water areas, rinse the canvas completely with fresh cold water. Then let the canvas dry completely before stowing.


All metal components of the canvas set should be rinsed with fresh cold water and exposed components wiped dry to maintain appearance and working order.

INSTALLATION TIPS:

- **Zippers** are located on each canvas piece. Make sure canvas is centered over bows. When attaching any canvas piece, zip the zippers only partially. This helps to hold the piece in place and relieves tension, helping the other sides zip or snap easier. After all the sides of the piece are secure, finish zipping all the zippers. This will ensure a tight fit.
- **Adjustable Support Poles** are located on the Convertible and Bimini Top. Take time to look at the adjustable support poles to see how they work. There is an outside tube and an inside tube. The button requires pushing in to enable the tubes to adjust to a longer or shorter settings.

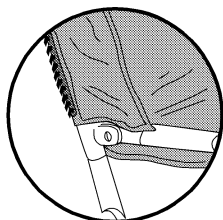

Zipper On Canvas
(fig. 15.1)

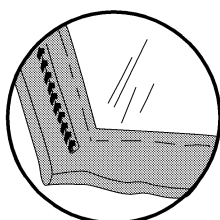


Zipper On Window
(fig. 15.2)

- **Windshield Snapless Extrusion**

The snapless extrusion designed by Sea Ray® eliminates the need for snaps and provides a superb water barrier at the windshield frame area. On the bottom edge of the Windshield Visors and Side Curtains you will notice the snapless rubber extrusion. The extrusion fits into the top of the windshield frame. See the illustration for proper installation of the snapless extrusion into the windshield frame. To ease the installation of the extrusion, remember to partially zip the Windshield Visor and Side Curtains to relieve tension.

It is recommended for safety and ease of installation that two (2) or more people are available to install or remove the canvas set. Take time to read over the instructions for the canvas piece(s) that you are to install or remove to familiarize yourself with the location of the components of your Sport Cruiser canvas set.

Snapless Extrusion (fig. 15.3)

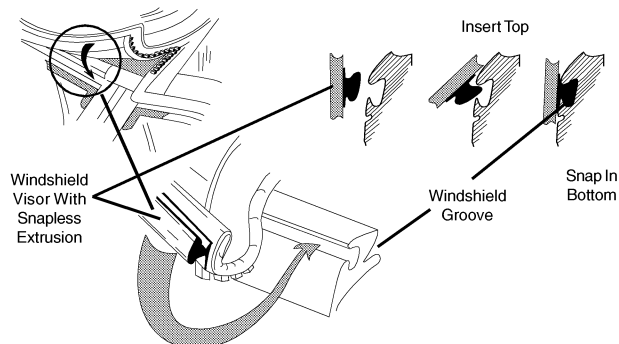

! WARNING

Convertible Top should not be used when the vessel speed exceeds 45 MPH. DO NOT have Convertible Top installed when trailering. Use Cockpit cover ONLY when trailering.

! WARNING


To Avoid Entrapment Of Carbon Monoxide Gas, Remove Aft Cover or Camper Top Canvas Before Starting Engine and Operating Vessel .

TRAILERING WITH CANVAS


You may trailer your boat with either cockpit cover or tonneau cover installed, however, the mooring cover must be installed over boat with tie down straps secure. The convertible top, side curtains and camper aft cover must be removed when trailering. Damage will occur to canvas and bows or boat if attached to boat while trailering.

BILGE LAYOUT

BILGE LAYOUT (AFT STARBOARD VIEW)
(FIG. 16.1)

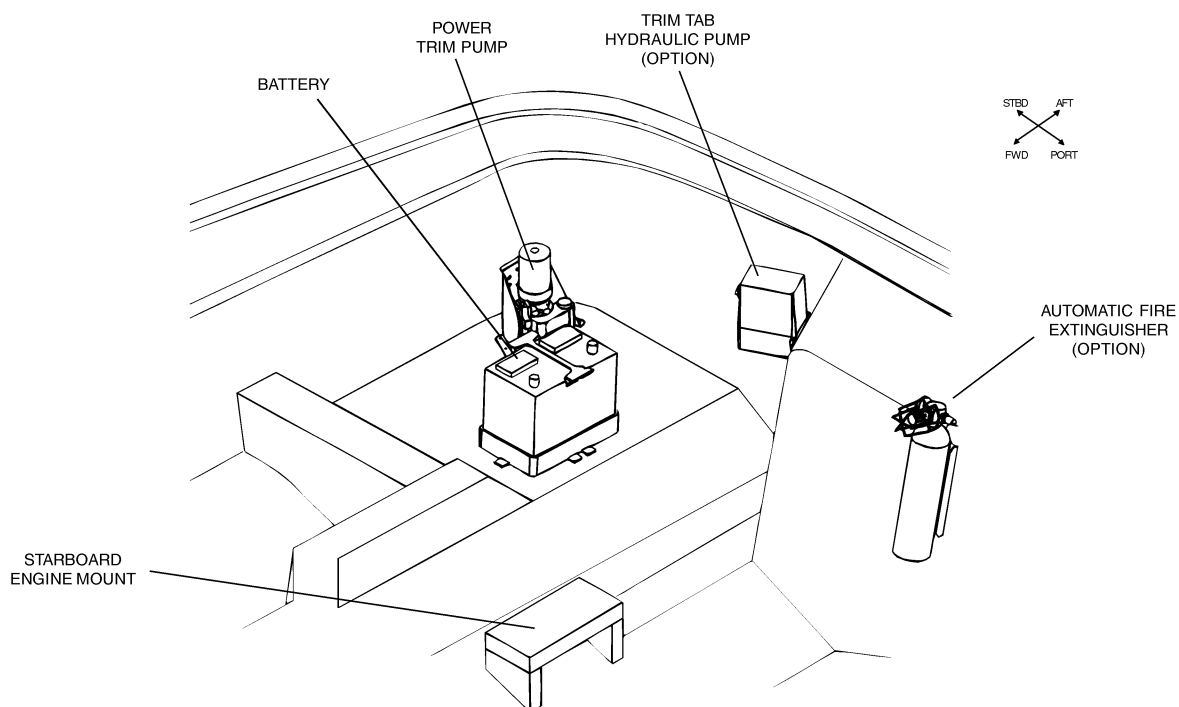


BILGE LAYOUT (AFT PORT VIEW)
(FIG. 16.2)

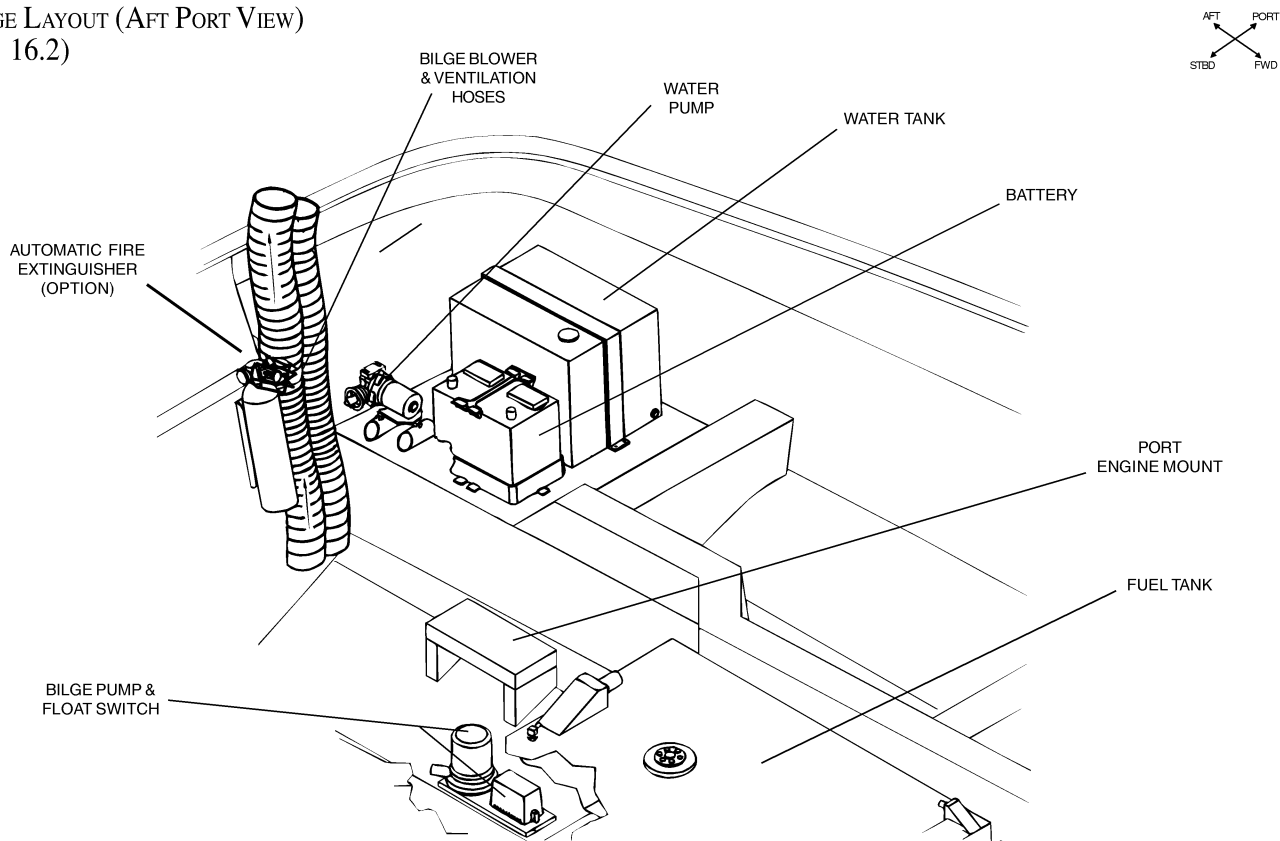


DASH PANEL LAYOUT


DASH (FIG. 17.1)

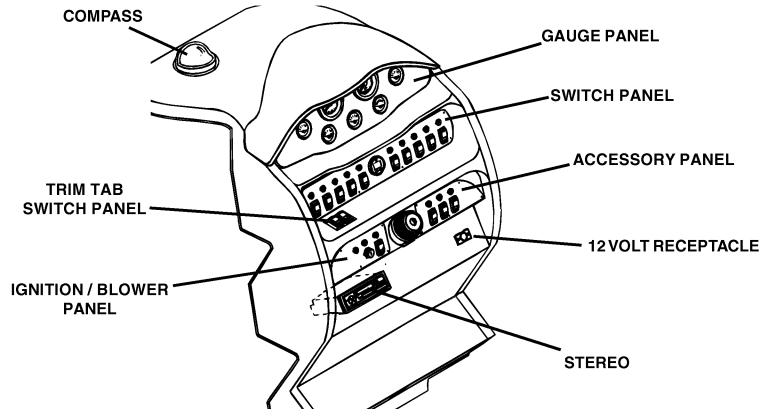


GAUGE PANEL (FIG. 17.2)

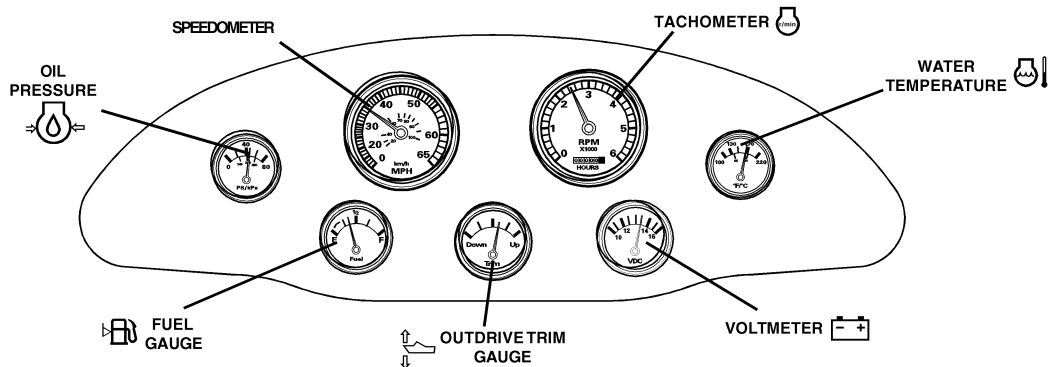


SWITCH PANEL (FIG. 17.3)

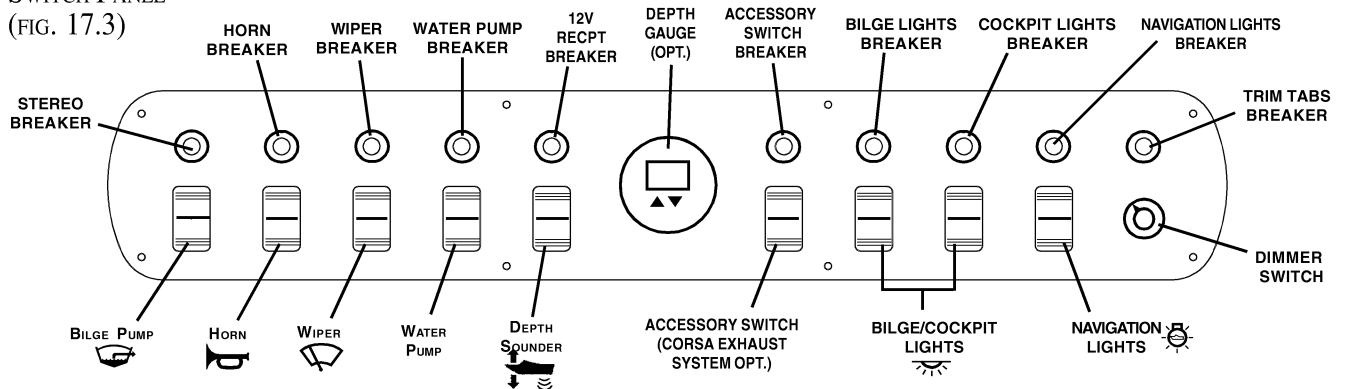

IGNITION/ BLOWER PANEL (FIG. 17.4)

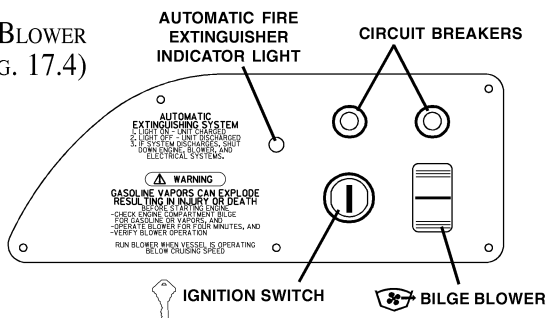


ACCESSORY PANEL (FIG. 17.5)

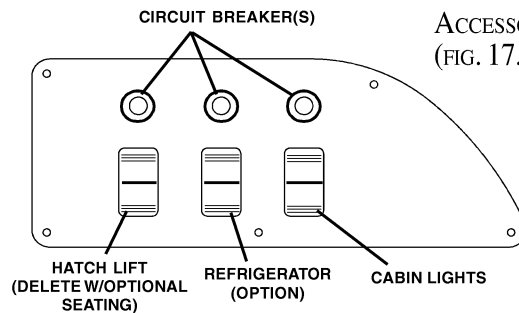


LOCATION OF THROUGH-HULL FITTINGS


PORT SIDE
(FIG. 18.1)

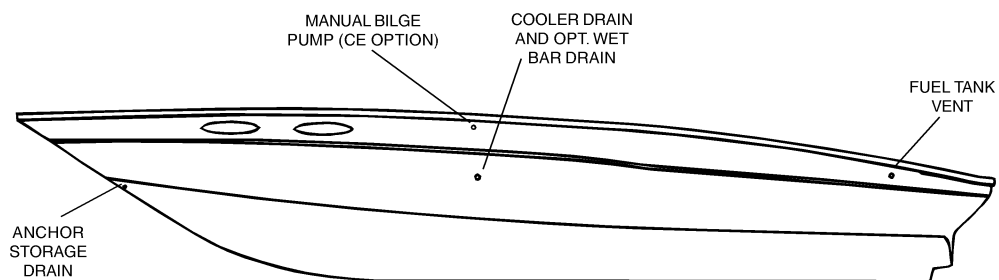


STARBOARD SIDE
(FIG. 18.2)

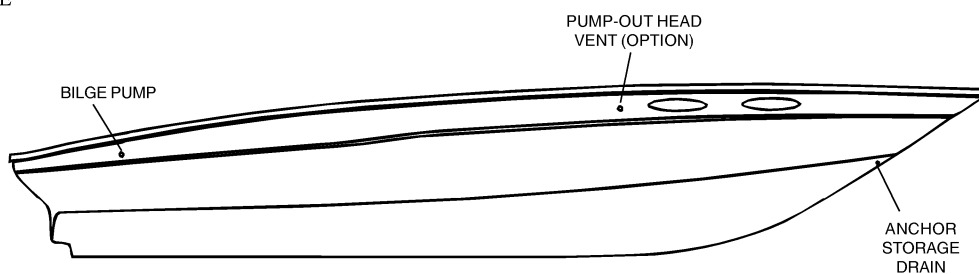

TRANSOM
(FIG. 18.3)

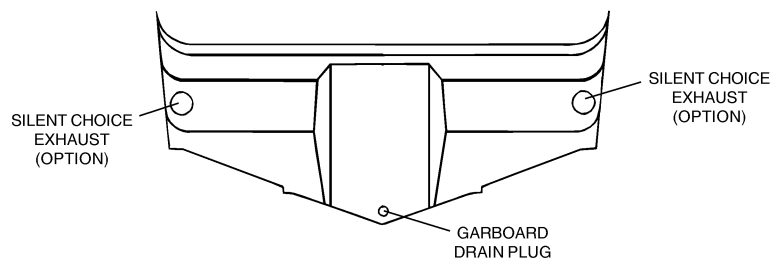


BILGE
(FIG. 18.4)

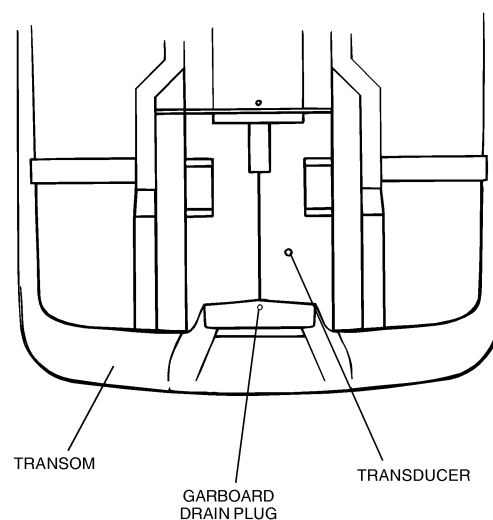


WIRE HARNESS INSTALLATION

(FIG. 19.1)

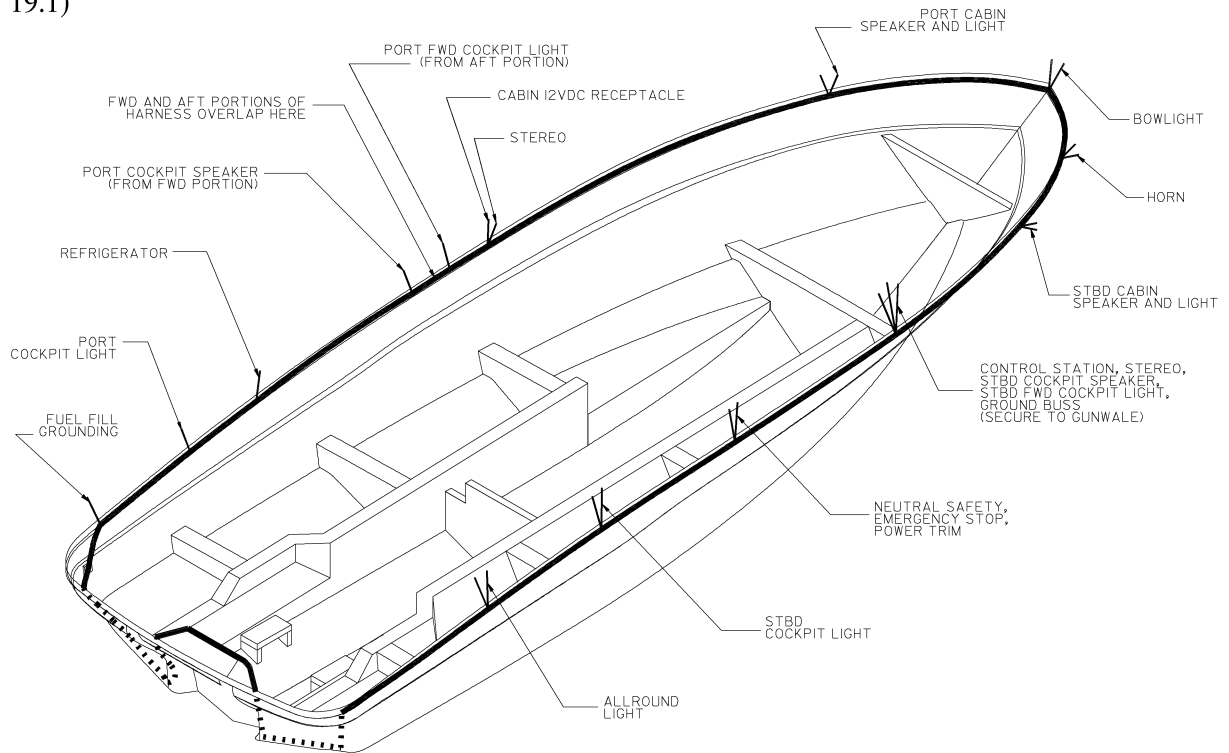


Print# 09-871, 1 of 2, Revision#1

(FIG. 19.2)

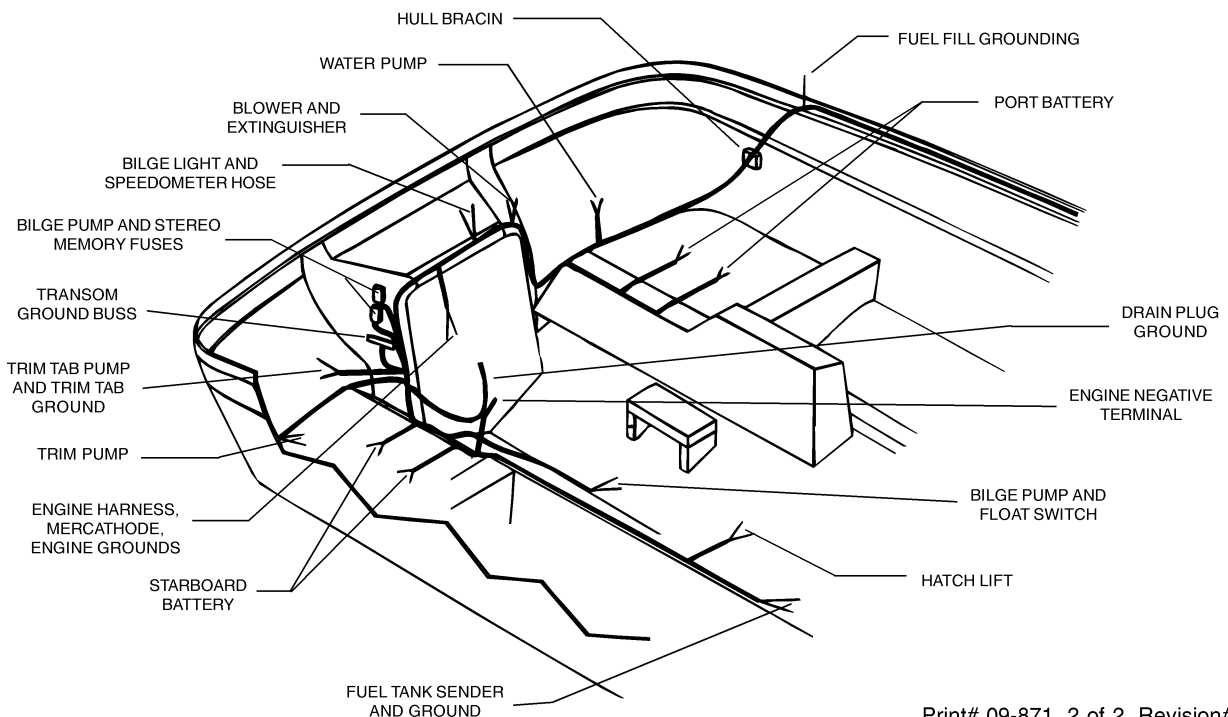


Print# 09-871, 2 of 2, Revision#0

DC WIRING DIAGRAM

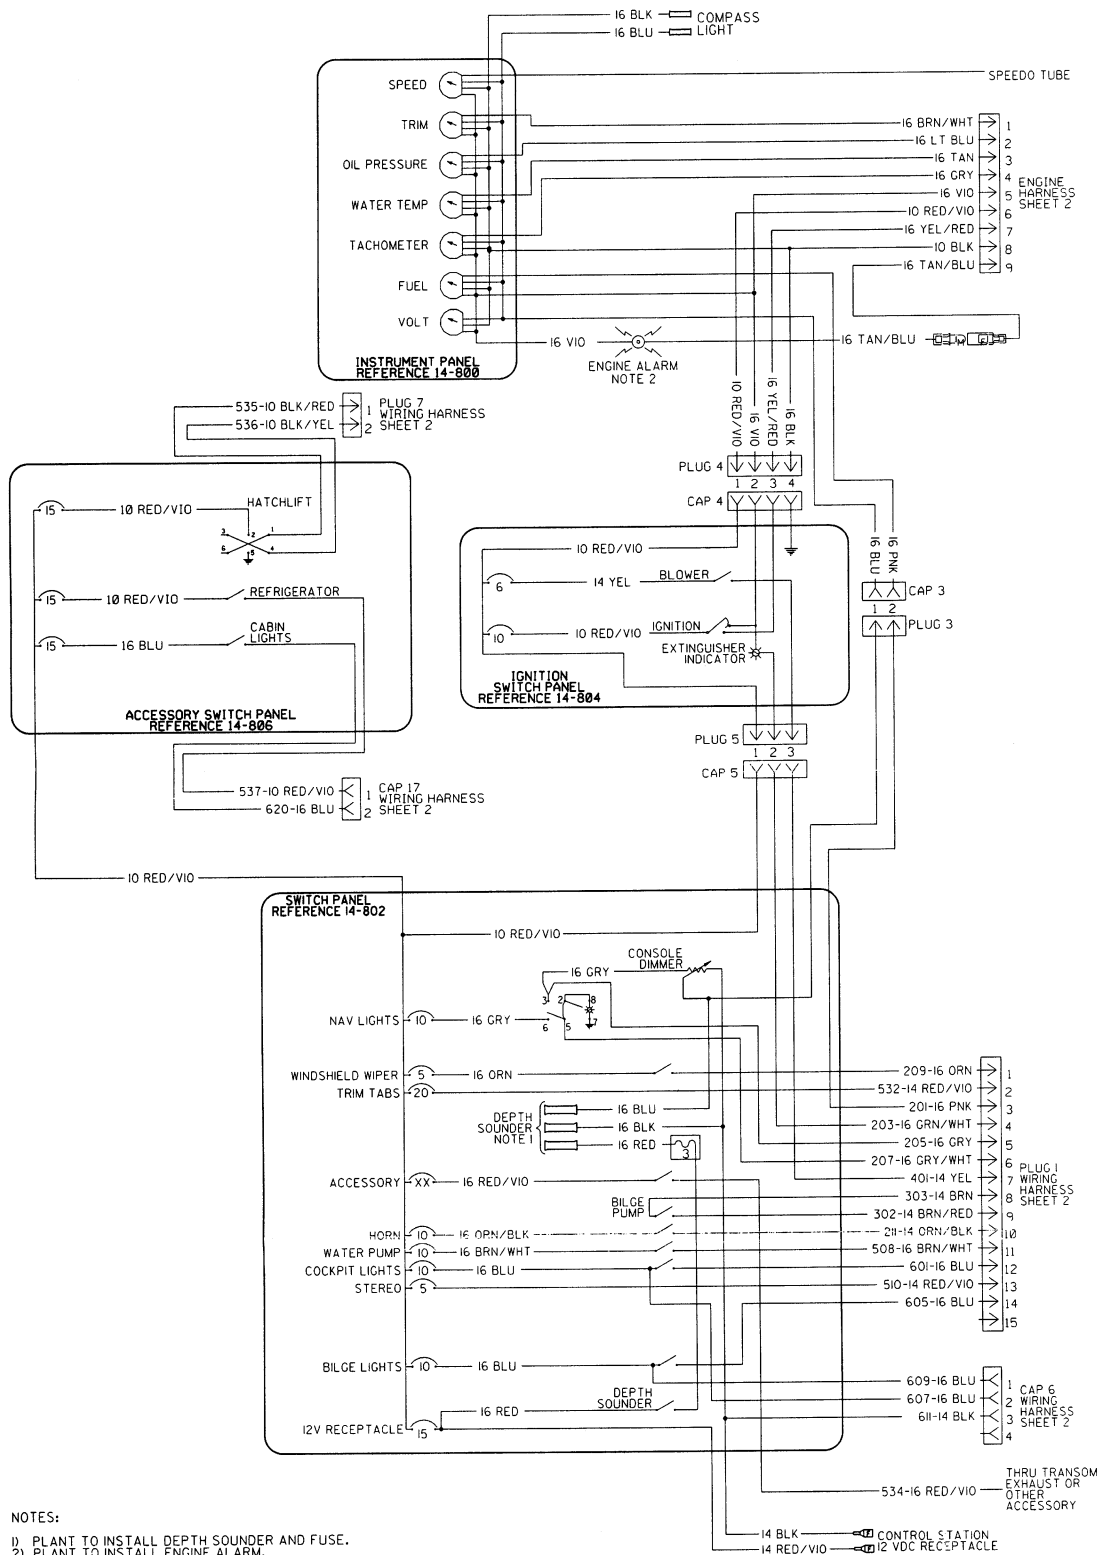


DC WIRING DIAGRAM

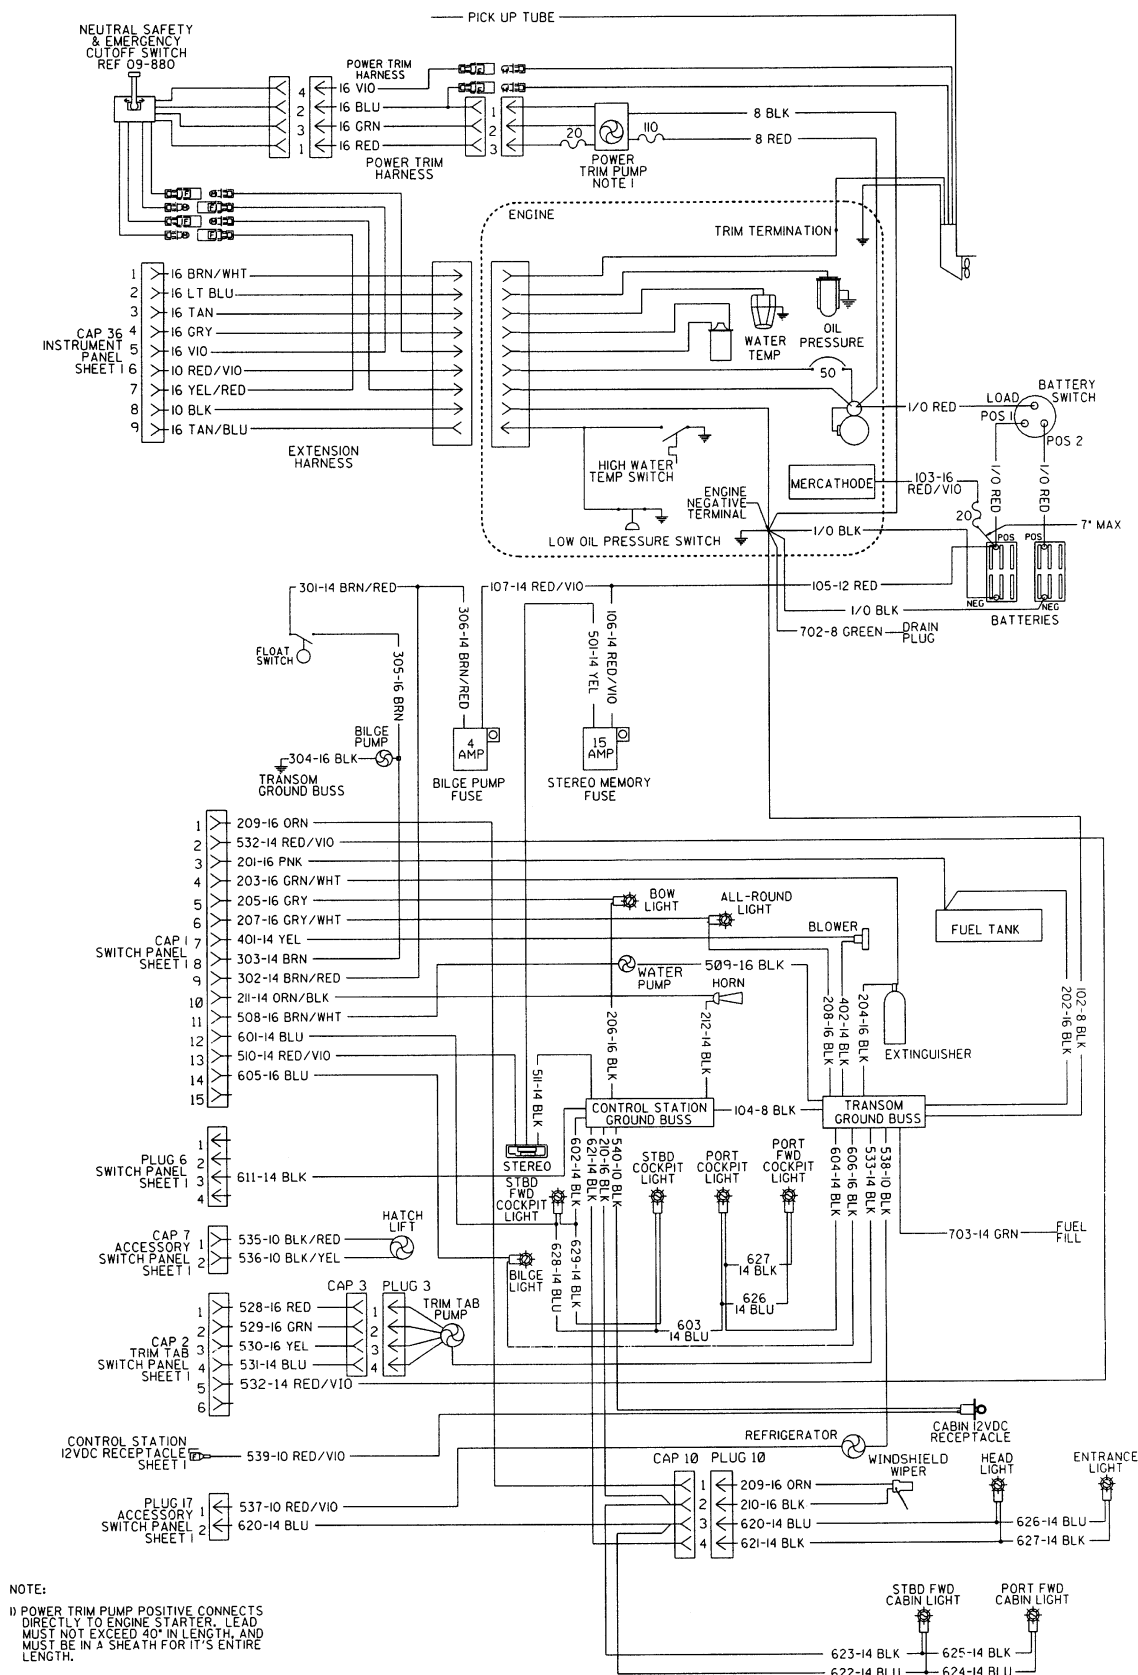

Print# 09-601, 2 of 2, Revision#0

WIRING HARNESS CONSTRUCTION

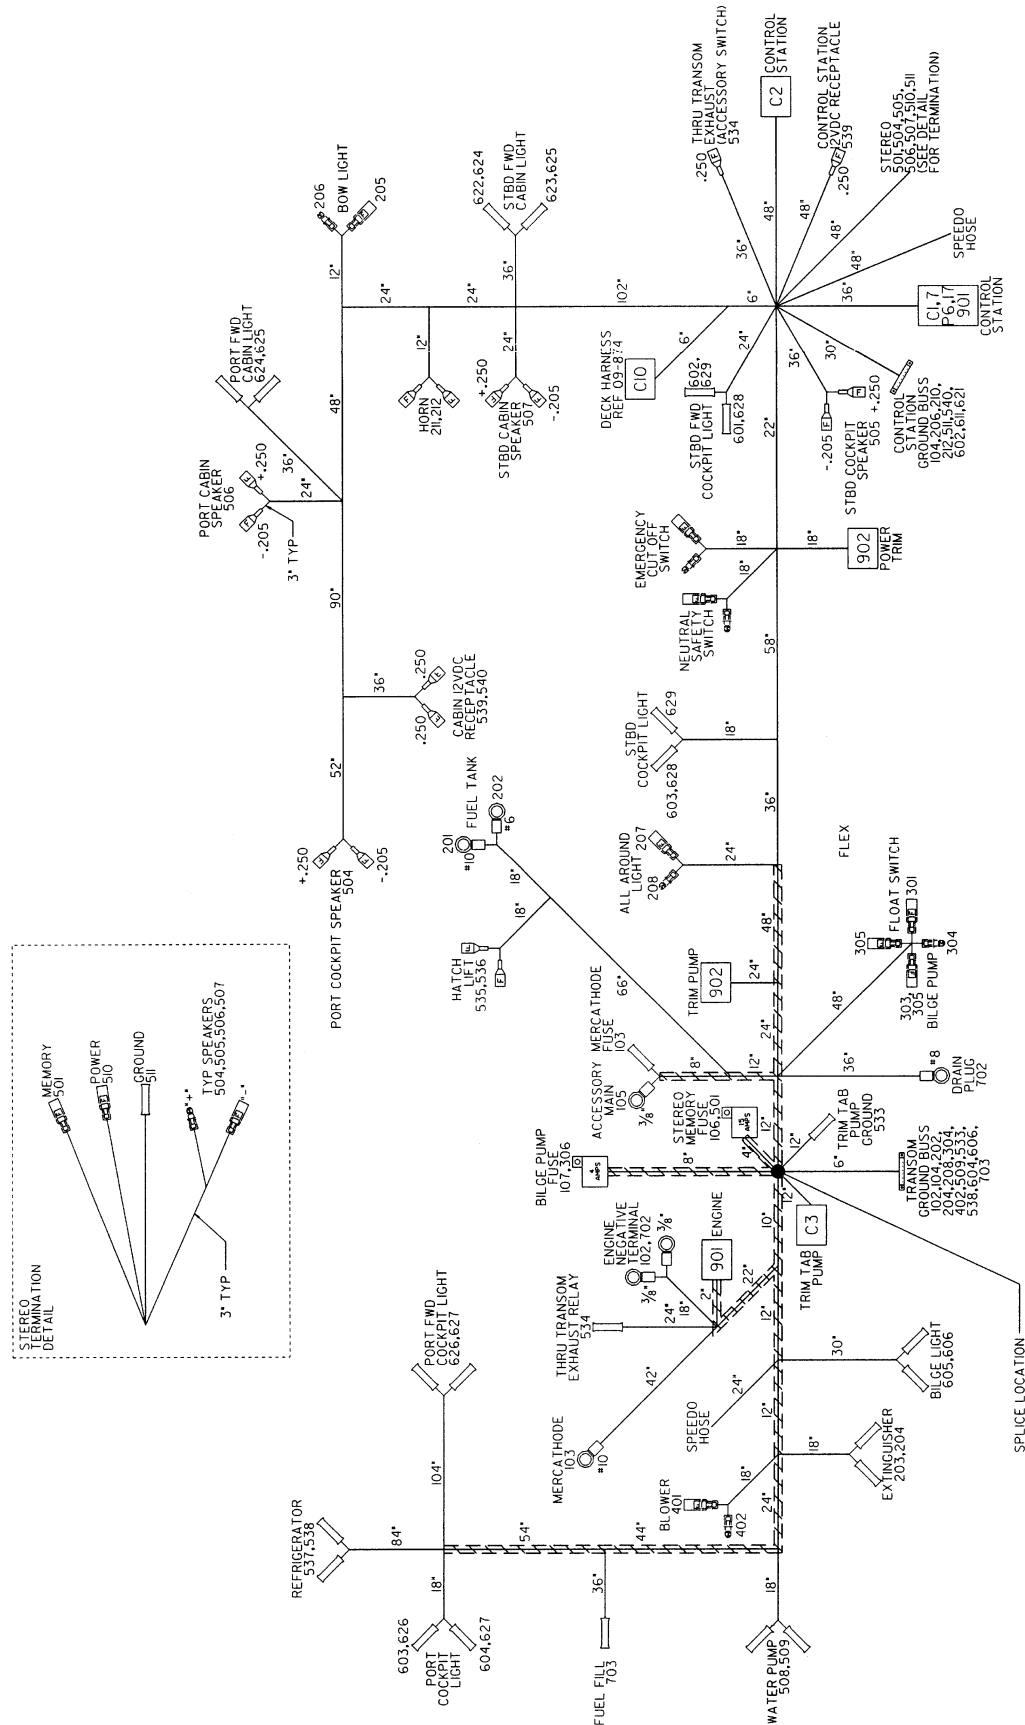

Print# 09-870, 5 of 7, Revision#0

INTERNATIONAL HOMOLOGATIONS

This vessel and its systems have been constructed in accordance with standards and specifications in effect at the time of manufacture as published by the various regulatory authorities listed below.

1. Ministere De La Mer - France
2. Registro Italiano Navale - Italy
3. Det Norske Veritas - Norway
4. Securite des Nauires - Canada
5. J.C.I. (Japan Craft Inspection) - Japan
6. N.K.K. (Nippon Kaiji Kyokai) - Japan
7. B.S.I. (British Standards Institute) - England
8. Ministerio Obras Publicas Y Transporters - Spain
9. EC Directive - European Community

Further information may be obtained from Sea Ray® Customer Service. 1-800-SRBOATS.

Sea Ray ®