


Sea Ray 

Specific
Information
Manual

260 Sundeck

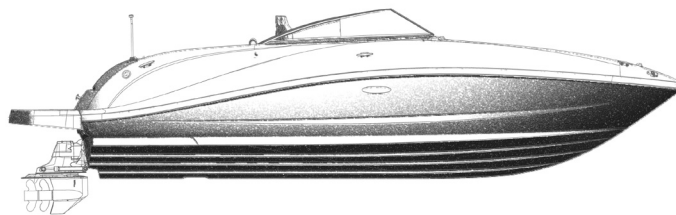

Manual Part Number: MRP 1902268

260 SUNDECK SPECIFIC INFORMATION MANUAL

TABLE OF CONTENTS

1. Load Capacity	1
2. Passenger Locations	1
3. Safety Label Locations	2
4. Basic Boat Dimensions and Clearances	3
5. Function and Location of Through-Hull Cutouts	4
6. Helm, Gauge & Switch Layout	5
7. Deck Layout	6
8. Cleats	7
9. Navigation and Anchor Lights	7
10. Bilge Layout	7
11. Fire Extinguishing System	8
12. Fuel System	8
13. Water System	8
14. Canvas	8
15. Entertainment System	8
16. Water Sports Tower	9
17. Electrical Schematic	9

Information in this publication is based upon the latest product specifications available at printing. Sea Ray® Boats, Inc. reserves the right to make changes at any time, without notice, in the colors, equipment, specifications, materials and prices of all models, or to discontinue models. Should changes in production models be made, Sea Ray® is not obligated to make similar changes or modifications to models sold prior to the date of such changes.

Owner's Manual
260 Sundeck

Printed in the U.S.A. April 2007

© Sea Ray Boats, Inc. • A Brunswick Company
Sea Ray Boats, Inc. 2600 Sea Ray Blvd., Knoxville, TN 37914
For information call 1-800-SRBOATS or fax 1-314-213-7878
(International 1-314-216-3333)

Internet Address: <http://www.searay.com>

Note: Not all accessories shown in pictures or described herein are
standard equipment or even available as options.
Options and features are subject to change without notice.

The following are registered trademarks of the Brunswick Corporation: Sea Ray® & The SR Wave Logo

Sea Ray 



THIS PAGE INTENTIONALLY LEFT BLANK



260 SUNDECK OWNERS MANUAL

1. LOAD CAPACITY


Refer to the General Information Manual for a detailed explanation of *Load Capacity*.

! DANGER


Never carry more weight or passengers than indicated on the certification plate, regardless of weather or water conditions.

The boat can capsize, swamp or sink.

BUILDER'S PLATE (INTERNATIONAL)
(FIG. 1.1)

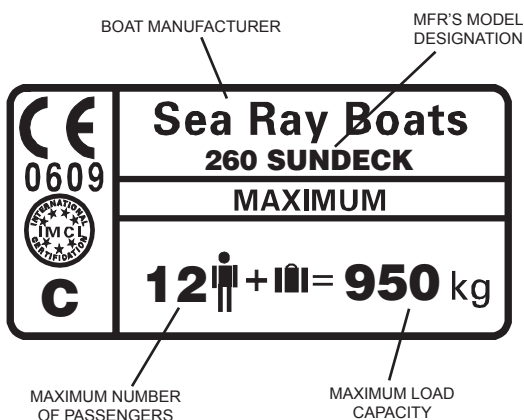

BUILDER'S PLATE (DOMESTIC)
(FIG. 1.2)

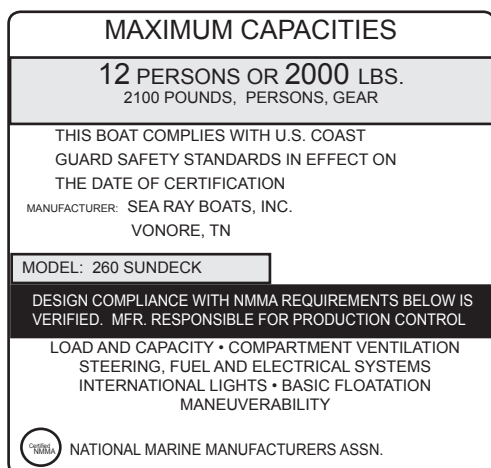

2. PASSENGER LOCATIONS

Refer to the General Information Manual for a detailed explanation of *Passenger Locations*.

! WARNING

Boat motion can be erratic.

You can fall overboard or be injured by hitting something in or on the boat.

All persons must be in cockpit area or cabin and be prepared for sudden boat movement.

Use front or bow deck area only during anchoring, mooring or emergencies.

! WARNING


Wet decks are slippery.

You can be seriously injured if you slip and fall.

Wear slip resistant footwear secured to your feet and hold on to rails or boat structure.

PASSENGER LOCATIONS
(FIG. 1.3)

ACCOMMODATION DECK
(DECK AREA INTENDED FOR
OCCUPATION DURING NORMAL
OPERATION)

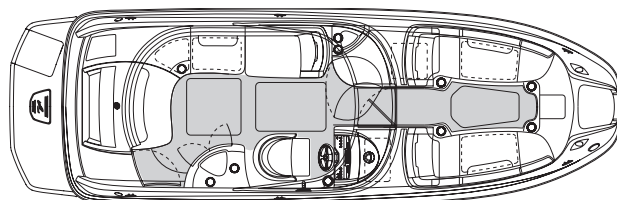

! DANGER

Rotating propellers can injure or kill you.

Shut off engine when persons are in water near boat, or on swim platform or ladder.


! WARNING

Rear facing transom seats **MUST NOT** be used while engine is running or boat is moving.



3. SAFETY LABEL LOCATIONS

SAFETY LABEL LOCATIONS (FIG. 2.1)

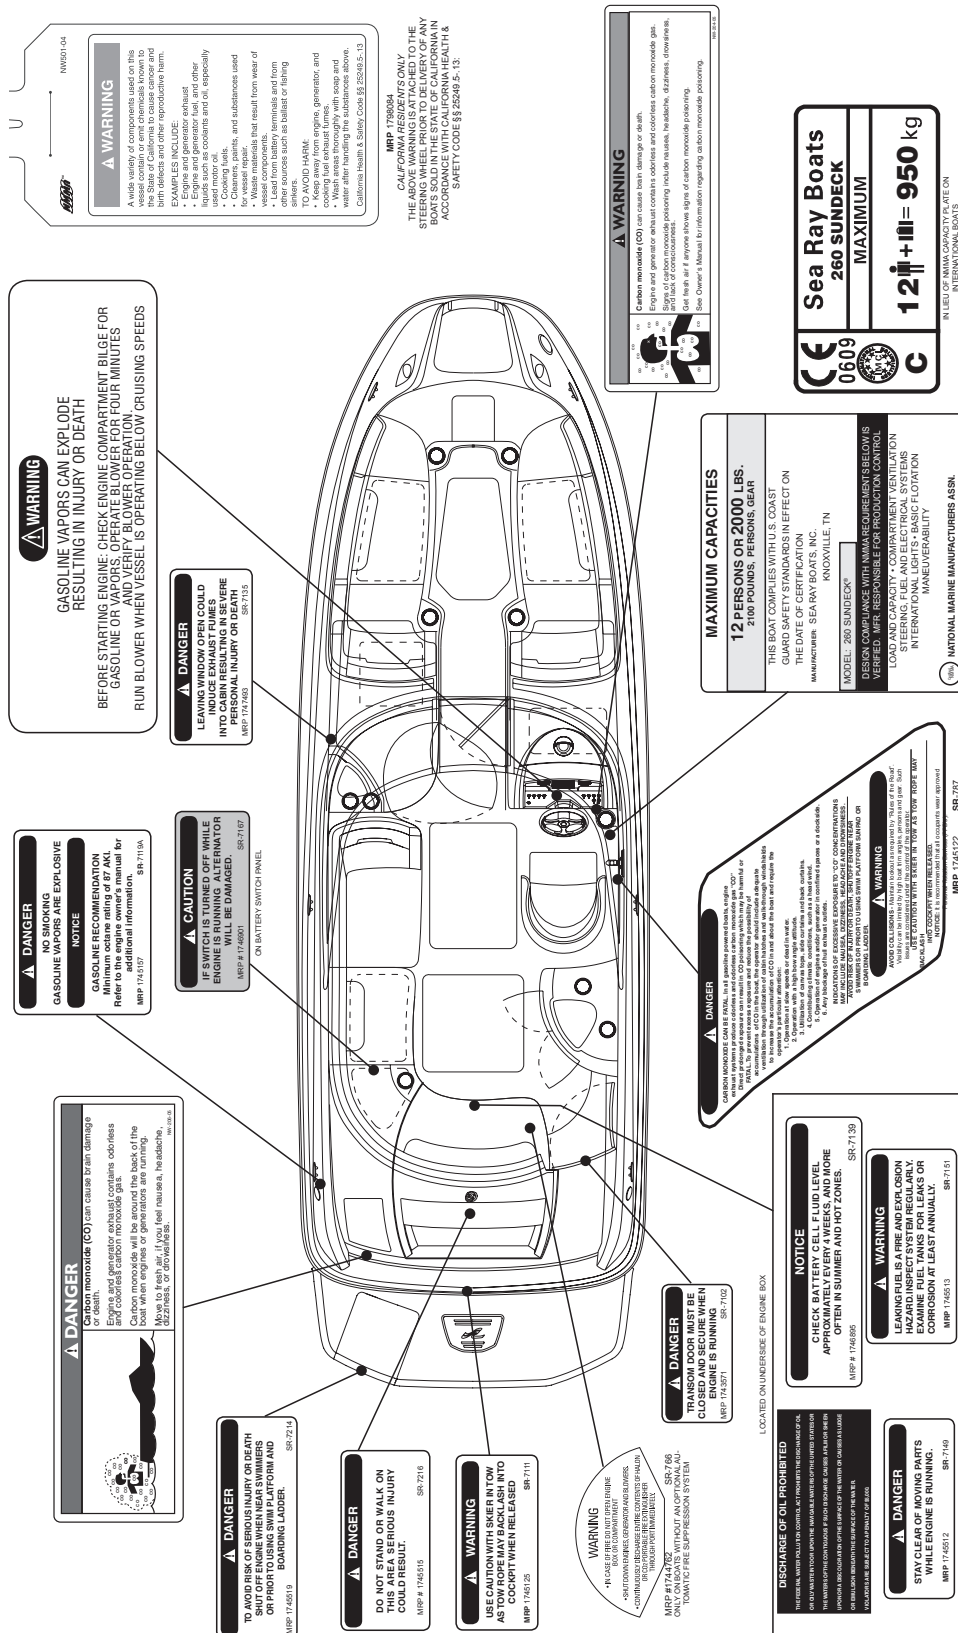


260 SUNDECK OWNERS MANUAL

4. BASIC BOAT DIMENSIONS AND CLEARANCES

BOAT DIMENSIONS AND CLEARANCES
(FIG. 3.1)

NOTE: DIMENSIONS CAN
VARY DEPENDING ON LOAD
AND RUNNING CONDITIONS

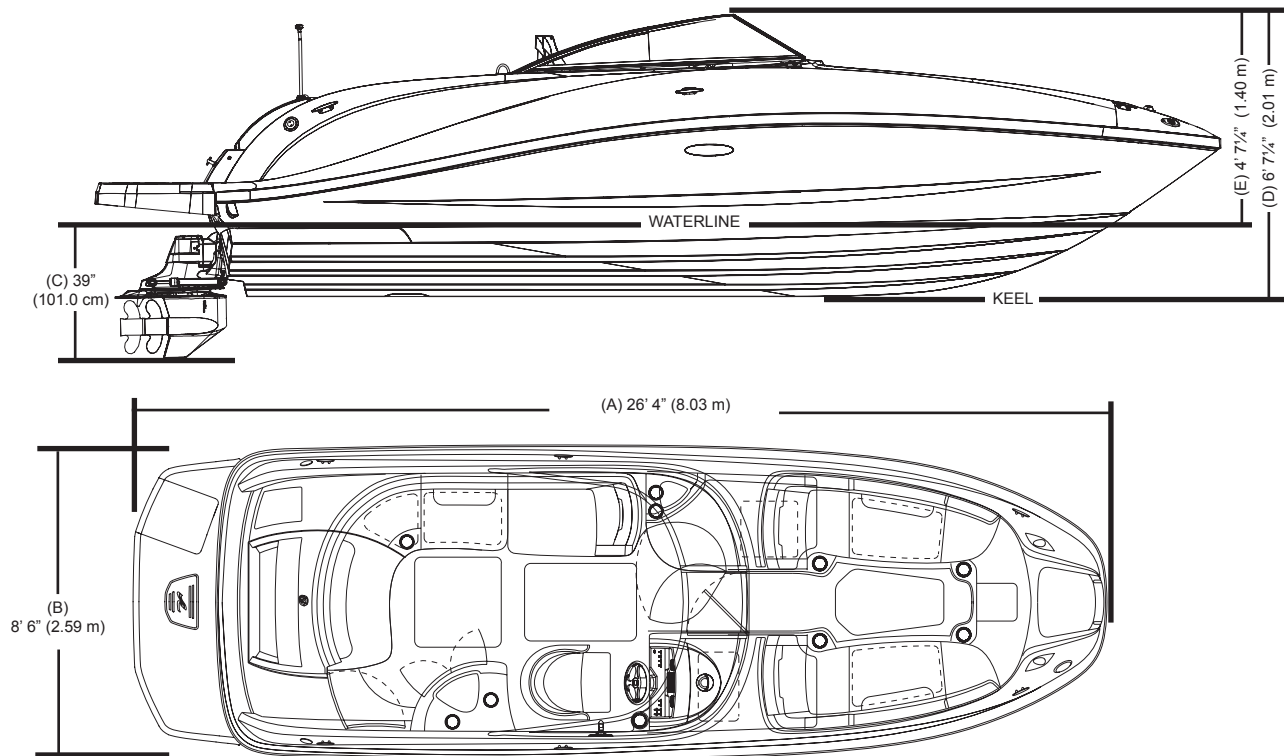

260 SUNDECK® SPECIFICATIONS

(A) Overall Length		
With Std. Swim Platform.....	26ft. 4in.	8.03 m
(B) Beam (Width).....	8ft. 6in.	2.59 m
(C) Draft (Stern Drive Down)	39in.*	99.1 cm*
Draft (Stern Drive Up).....	23in.*	58.4 cm*

* MINIMUM WATER DEPTH TO PREVENT RUNNING AGROUND

Dry Weight.....	4,960 lbs.	2,250 kg.
Fuel Capacity.....	65 gal.	246.1 liters
Usable Fuel	58.5 gal.	221.4 liters
Fresh Water Capacity	18 gal.	68.1 liters
Dead Rise.....	21°	


HEIGHT DIMENSIONS

(D) Keel to Top of Windshield	6ft. 7 1/4in.	2.01 m
(E) Waterline to Top of Windshield	4ft. 7 1/4in.	1.40 m


260 SUNDECK OWNERS MANUAL

5. FUNCTION AND LOCATION OF THROUGH-HULL CUTOUTS


STARBOARD THROUGH-HULL CUTOUTS
(FIG. 4.1)

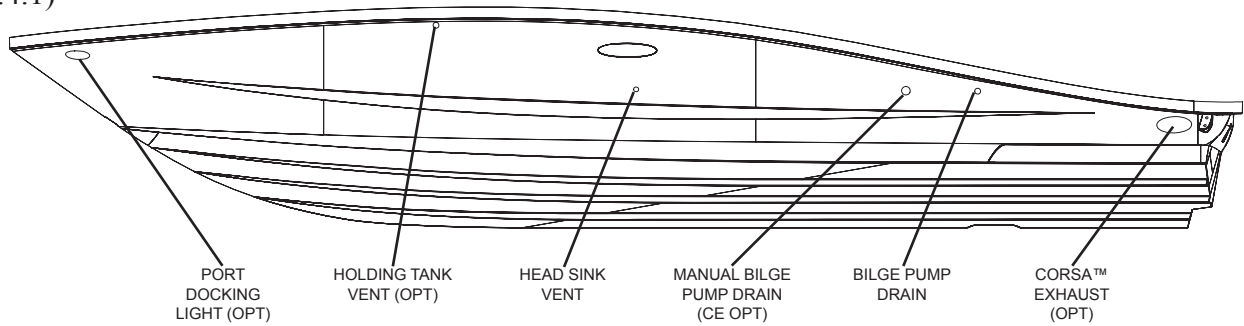


STARBOARD THROUGH-HULL CUTOUTS
(FIG. 4.2)

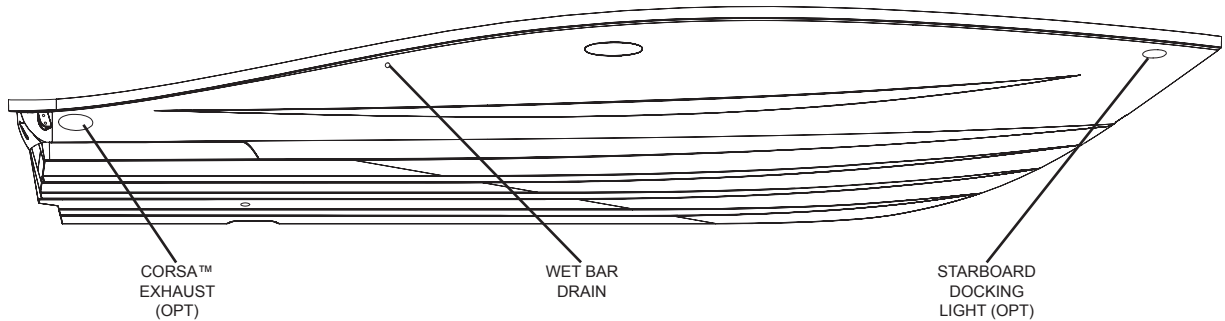

BILGE THROUGH-HULL CUTOUTS
(FIG. 4.3)

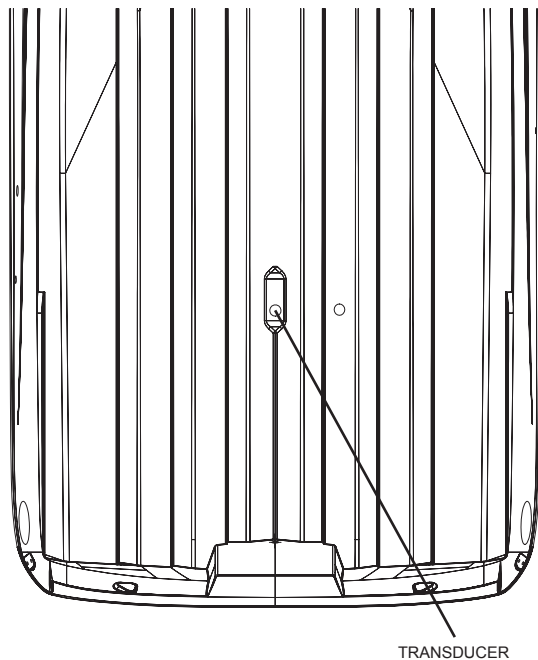


TRANSOM THROUGH-HULL CUTOUTS
(FIG. 4.4)

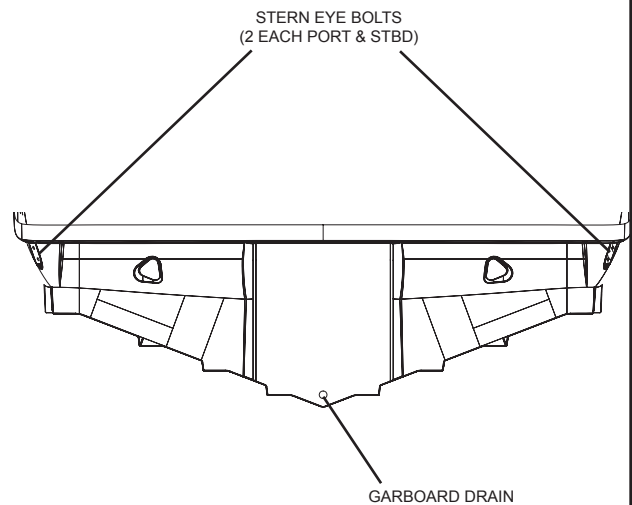


260 SUNDECK OWNERS MANUAL

6. HELM, GAUGE & SWITCH LAYOUT

HELM
(FIG. 5.1)

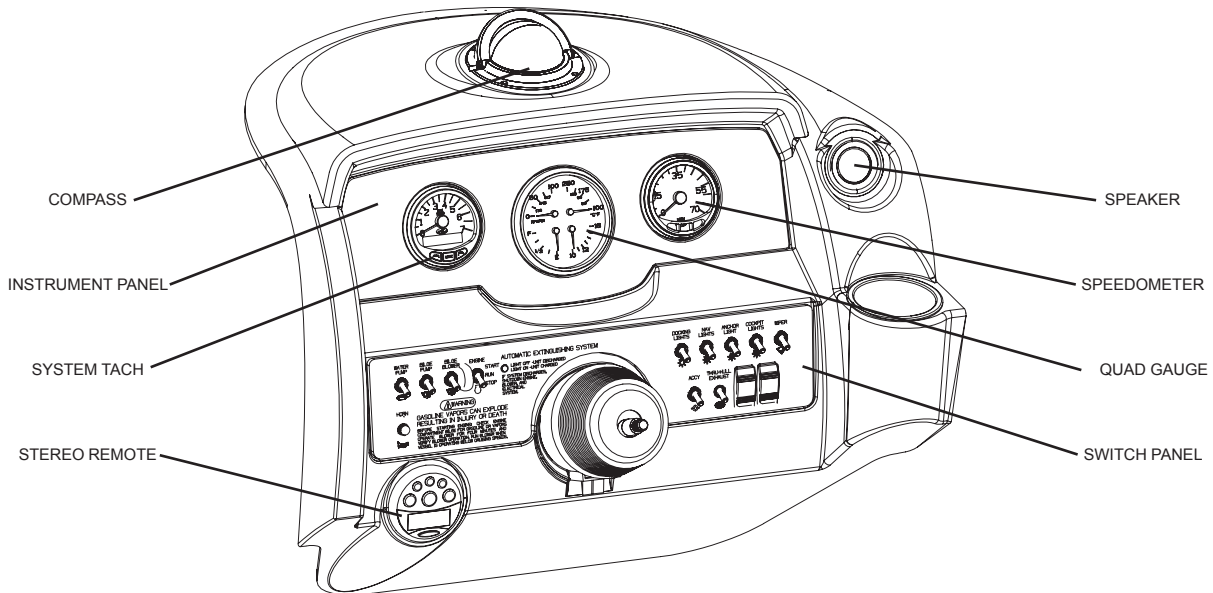


CONTROL STATION SWITCH PANEL
(FIG. 5.2)

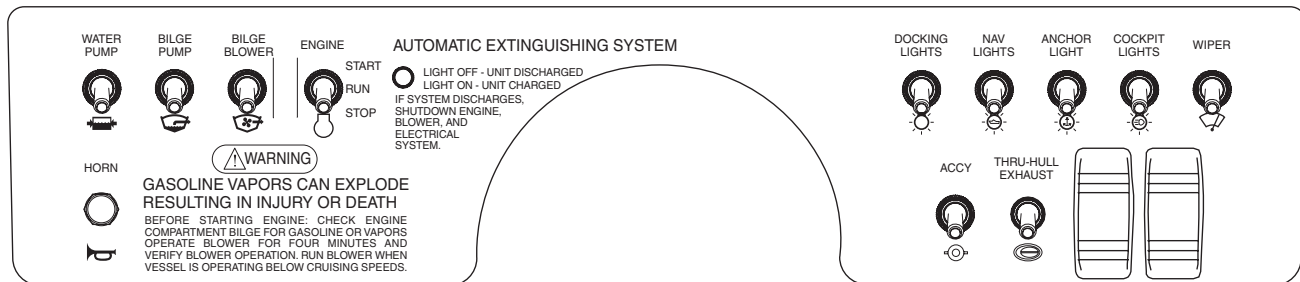

260 SUNDECK OWNERS MANUAL

7. DECK LAYOUT

GENERAL LAYOUT
(FIG. 6.1)

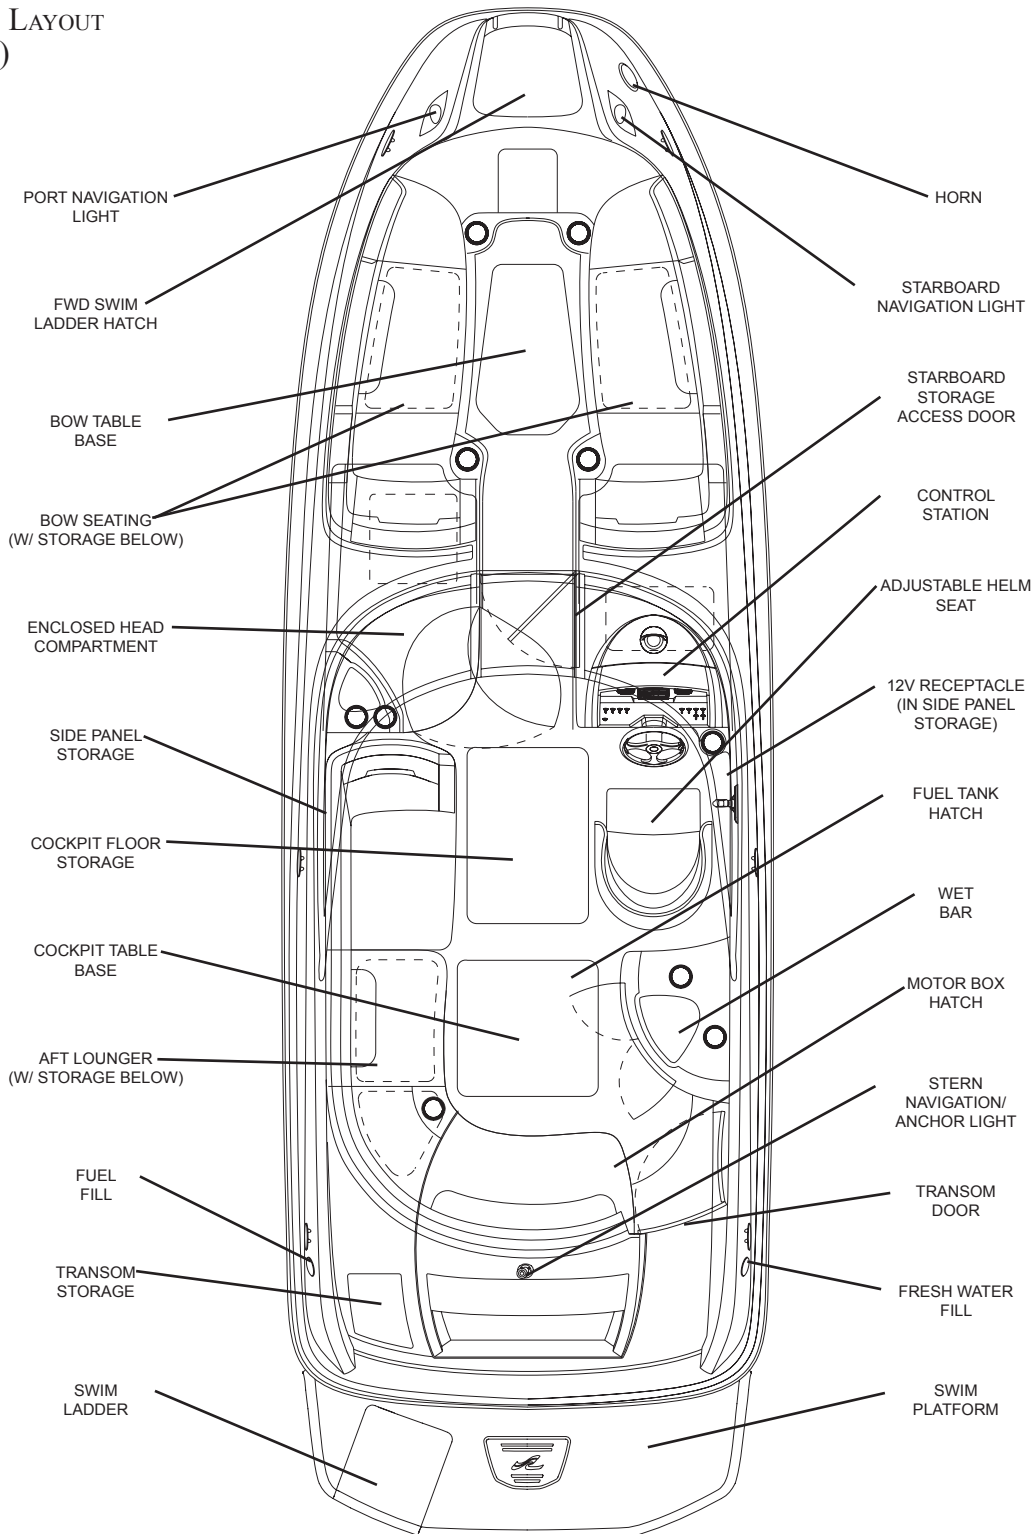


260 SUNDECK OWNERS MANUAL

8. CLEATS

Cleats must not be used for lifting the boat; they are intended for docking or mooring use only.


CLEAT LOCATIONS
(FIG. 7.1)

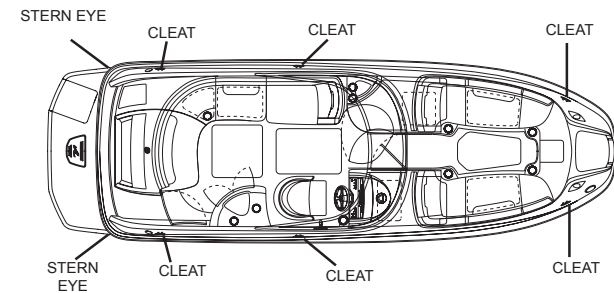


9. NAVIGATION AND ANCHOR LIGHTS

See General Information Manual for a detailed explanation of the anchor lights.

NAVIGATION AND ANCHOR LIGHTS
(FIG. 7.2)

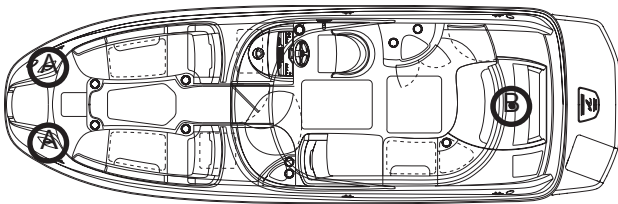


PORT/STBD
NAV. LIGHT

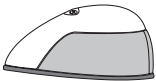 

BULB REPLACEMENT
BULB# GE2641L
12V R 10W

(A)

 STERN NAV. /
ANCHOR LIGHT

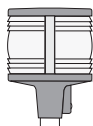


BULB REPLACEMENT
FUSE TYPE BULB
#12V10WPERKO

(B)

10. BILGE LAYOUT

BILGE LAYOUT
(FIG. 7.3)

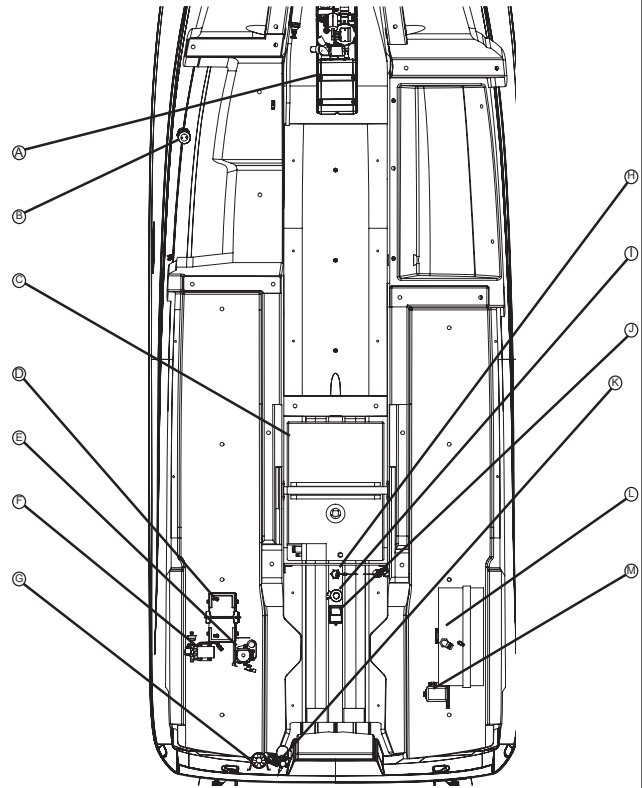

- (A) WASTE HOLDING TANK (OPT)
- (B) WASTE PUMPOUT (OPT)
- (C) FUEL TANK
- (D) BATTERY
- (E) POWER TRIM PUMP
- (F) FRESH WATER PUMP
- (G) BLOWER
- (H) TRANSDUCER
- (I) BILGE PUMP
- (J) FLOAT SWITCH
- (K) AUTOMATIC FIRE EXTINGUISHER (OPT)
- (L) FRESH WATER TANK
- (M) TRIM TABS PUMP



260 SUNDECK OWNERS MANUAL

11. FIRE EXTINGUISHING SYSTEM

Your 260SD has an automatic fire extinguisher system option. Refer to the General Information Manual for a detailed explanation of the automatic fire extinguisher system.

12. FUEL SYSTEM

The 260 Sundeck standard gasoline fuel system consists of a 65 gallon (246.1 liter) fuel tank, fuel tank vent, anti-siphon valve, engine fuel supply line and fuel fill.

13. WATER SYSTEM

The fresh water system on the 260SD consists of a 20 gal. (75.7 liter) tank, 12v water pump, faucet (head compartment), sprayer (wet bar) and 2 pullout sprayers (bow and stern). Refer to the General Information Manual for a detailed explanation of the water system.

14. CANVAS

The following canvas pieces are available individually as options:

- Sunbrella® Bimini Top w/ Boot
- Cockpit and Tonneau Covers w/ storage Bag
- Travel/Storage Cover



DANGER

Exhaust fumes from engines contain deadly carbon monoxide gas (CO). Boats enclosed with canvas or with poor ventilation are most likely to collect fumes.

CO sickness symptoms include headache, nausea and dizziness. Do not mistake these symptoms for sea sickness.

Ventilate boat. See Section 1.4, Carbon Monoxide, for more details.


Do not use the rear (aft) curtain while engine is running or boat is moving.

15. ENTERTAINMENT SYSTEM


The 12 volt AM/FM radio single CD satellite ready stereo with MP3 port is located in the starboard storage area.

The system includes six (6) water proof speakers, a subwoofer, a digital remote control located at the control station and an optional remote on the transom. An optional speaker system is available with the Water Sports Tower option.

STEREO SYSTEM (12 VOLT AM/FM, SATELLITE RADIO & CD)
(FIG. 8.1)

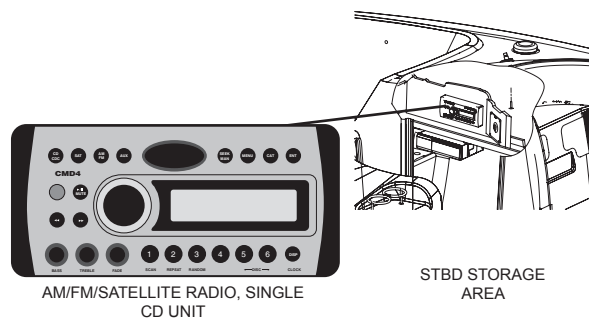

STEREO REMOTE (LOCATED ON THE DASH)
(FIG. 8.2)

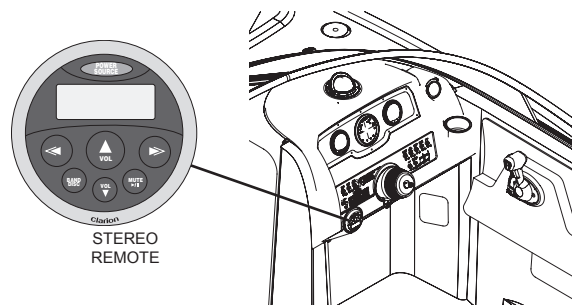

260 SUNDECK OWNERS MANUAL


! WARNING

DO NOT USE TOWER FOR PULLING INFLATABLES. Use water sports tower for single skier/wakeboarder only. Use ski tow or stern eyes on transom for all other tow behind sports. Heavy loads could collapse tower causing personal injury.

! WARNING

DO NOT USE WATER SPORTS TOWER FOR TOWING ANOTHER BOAT OR BEING TOWED. TOWER COULD COLLAPSE AND CAUSE INJURY. SEE OWNER'S MANUAL FOR INSTRUCTIONS ON TOWING.

WATER SPORTS TOWER (OPTIONAL)
(FIG. 9.1)

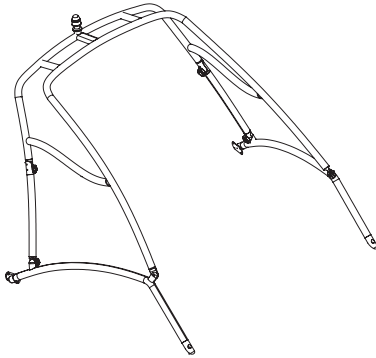

16. WATER SPORTS TOWER


If equipped, the water sports tower provides a raised attach point (ski tow pylon) for the ski rope. The high attach point enables the skier to perform a wide variety of skills not capable with the lower transom attach point.

The tower attach point is intended for use only when towing a single skier. If you are towing multiple skiers or water toys carrying more than one person use only the transom attach point. The tower attach point is NOT intended for towing inflatables.

17. ELECTRICAL SCHEMATICS

This owner's manual contains electrical schematics and wiring harness illustrations for your boat. These electrical schematics were generated by electrical CAD designers at the engineering division for technical reference and service technicians. Sea Ray® does not recommend that you attempt to work on the boat's electrical system yourself. Instead, we recommend that you take your boat to your authorized Sea Ray® dealer for service. Sea Ray® reserves the right to change or update the electrical system on any model at any time without notice to the consumer and is NOT obligated to make any updates to units built prior to changes.


DC WIRING DIAGRAM (1 OF 3)
DRAWING NO. 09-601 (1 OF 3)
(Fig. 10.1)

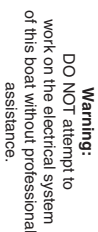

ELECTRICAL SCHEMATICS (CONTINUED)


DC WIRING DIAGRAM (2 OF 3)
DRAWING NO. 09-601 (2 OF 3)

(Fig. 11.1)

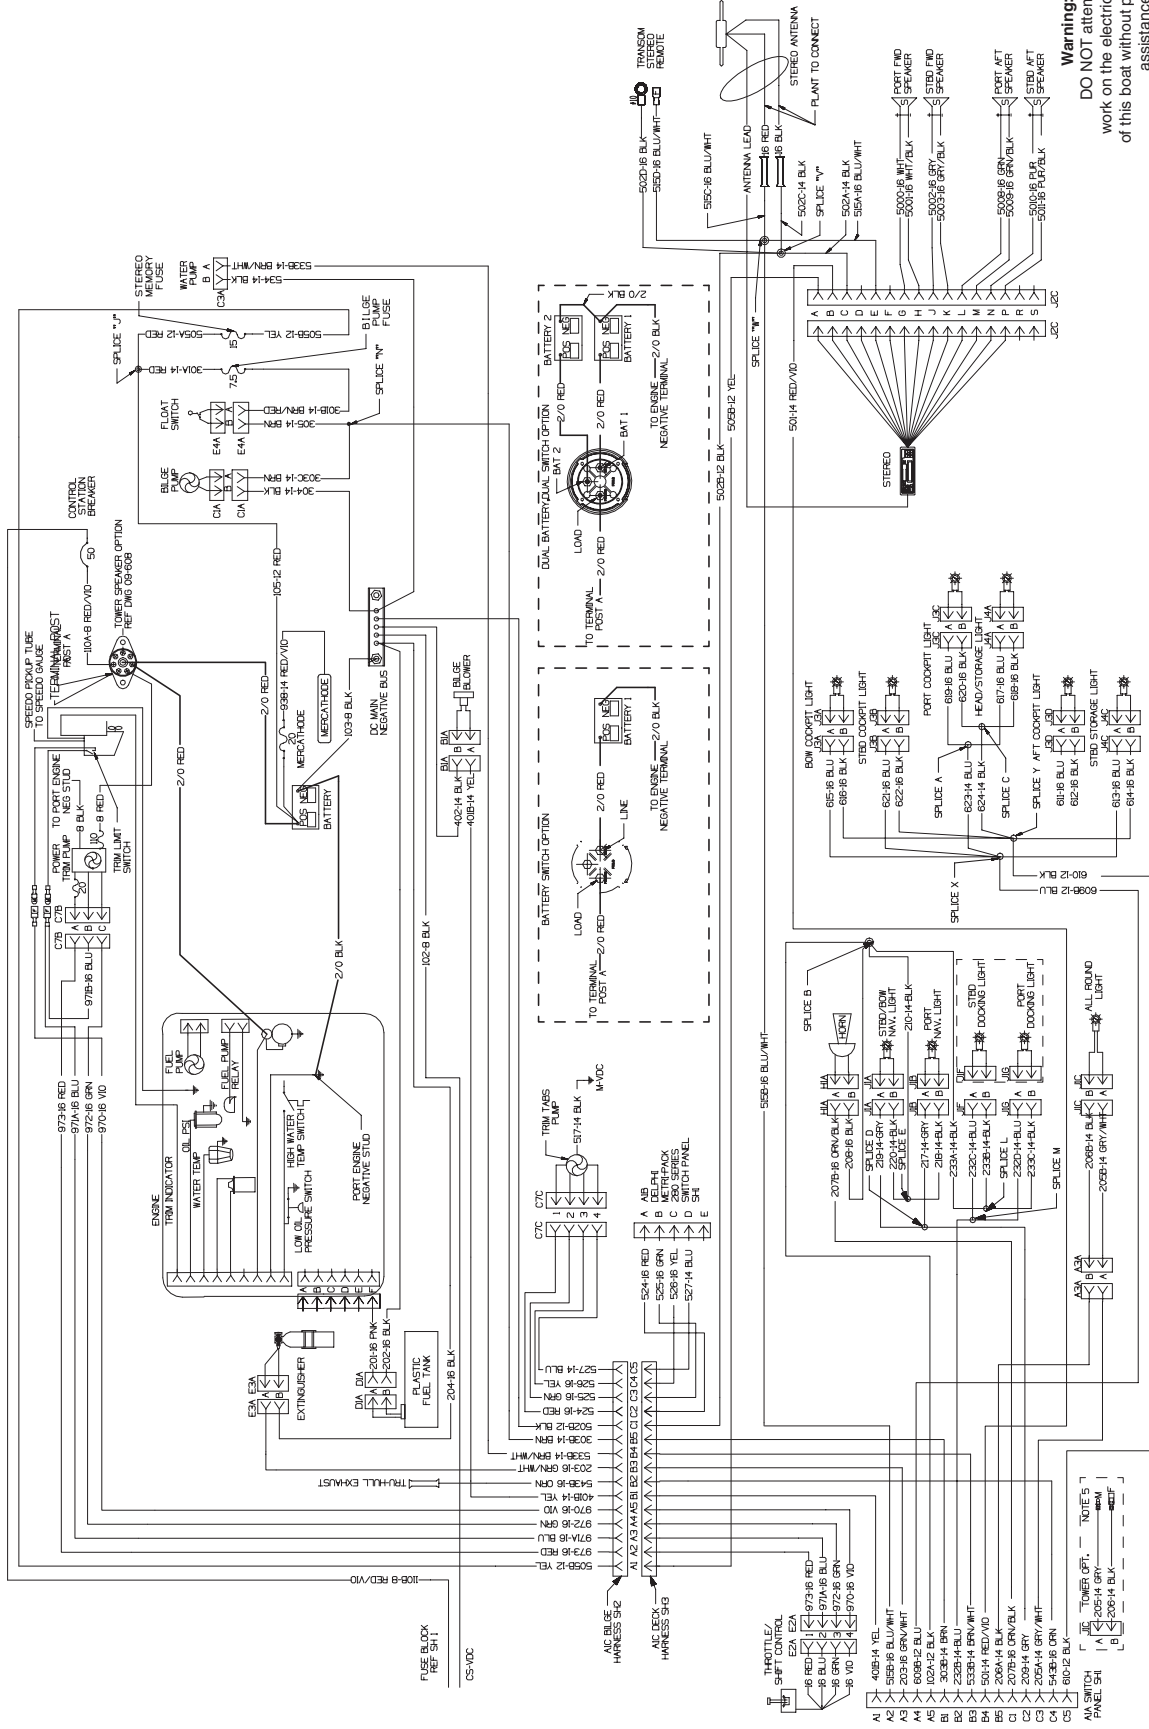

ELECTRICAL SCHEMATICS (CONTINUED)

DC WIRING DIAGRAM (3 OF 3)
DRAWING NO. 09-601 (3 OF 3)
(Fig. 12.1)

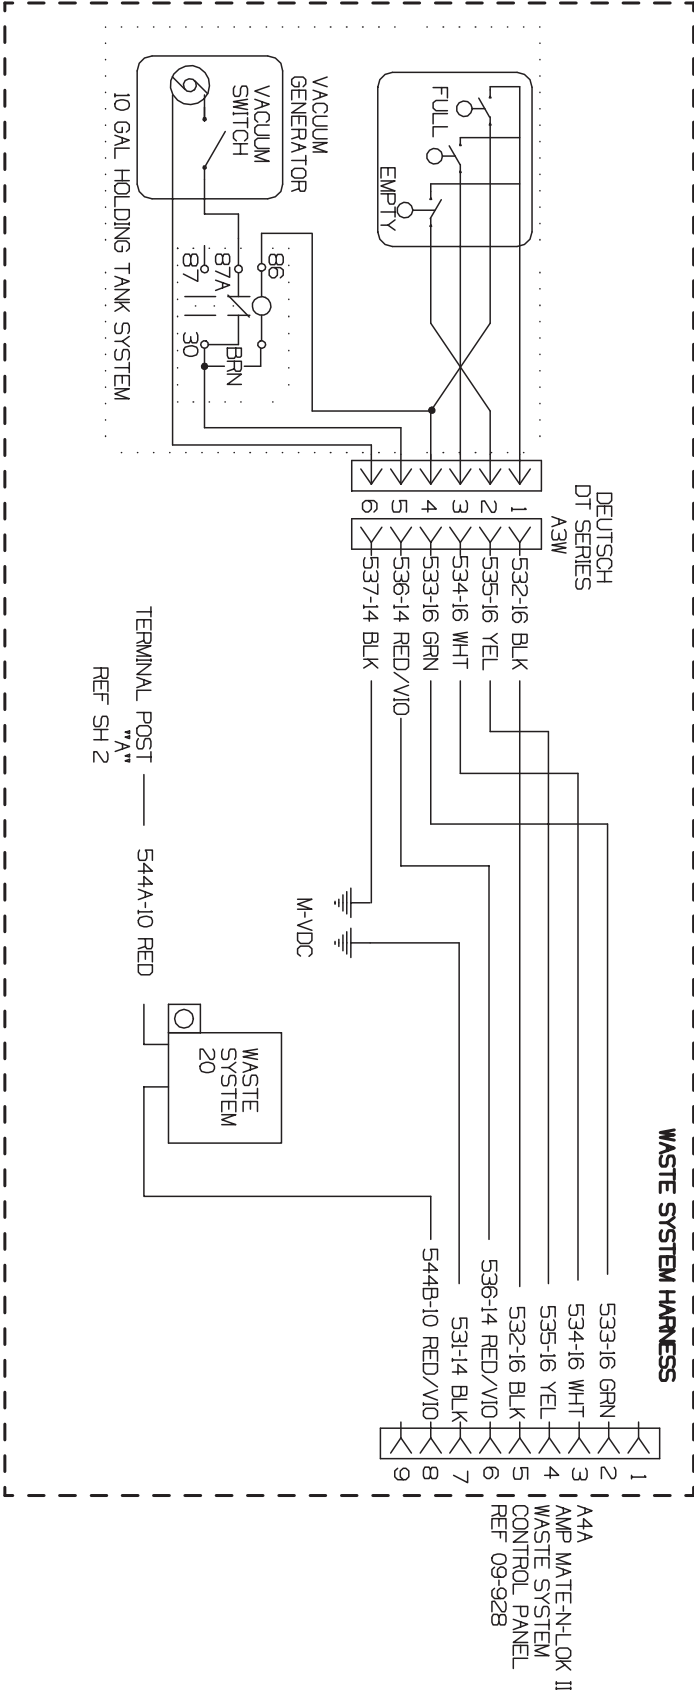

LEGEND


X = SPLICE

M-VDC = MAIN DC NEGATIVE BUS

Warning:
DO NOT attempt to
work on the electrical system
of this boat without professional
assistance.




DC WIRING DIAGRAM (MERC DTS OPTION)
DRAWING NO. 09-602
(FIG. 13.1)

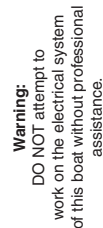

ELECTRICAL SCHEMATICS (CONTINUED)

STEREO WIRING DIAGRAM (STANDARD)
DRAWING NO. 09-607


(Fig. 14.1)

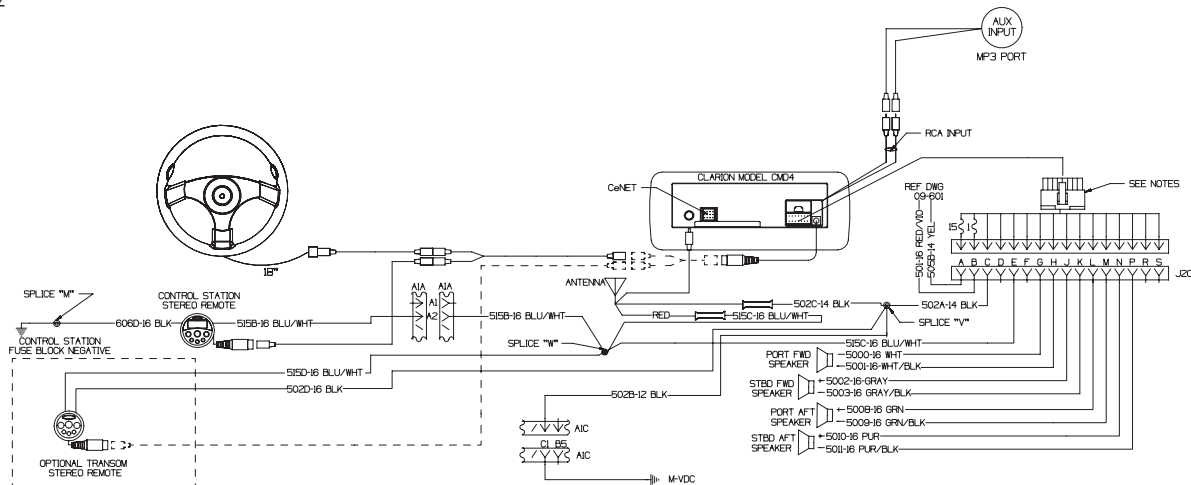

Warning:
DO NOT attempt to
work on the electrical system
of this boat without professional
assistance.


STEREO WIRING DIAGRAM (OPTIONAL)
DRAWING NO. 09-608

(Fig. 14.2)

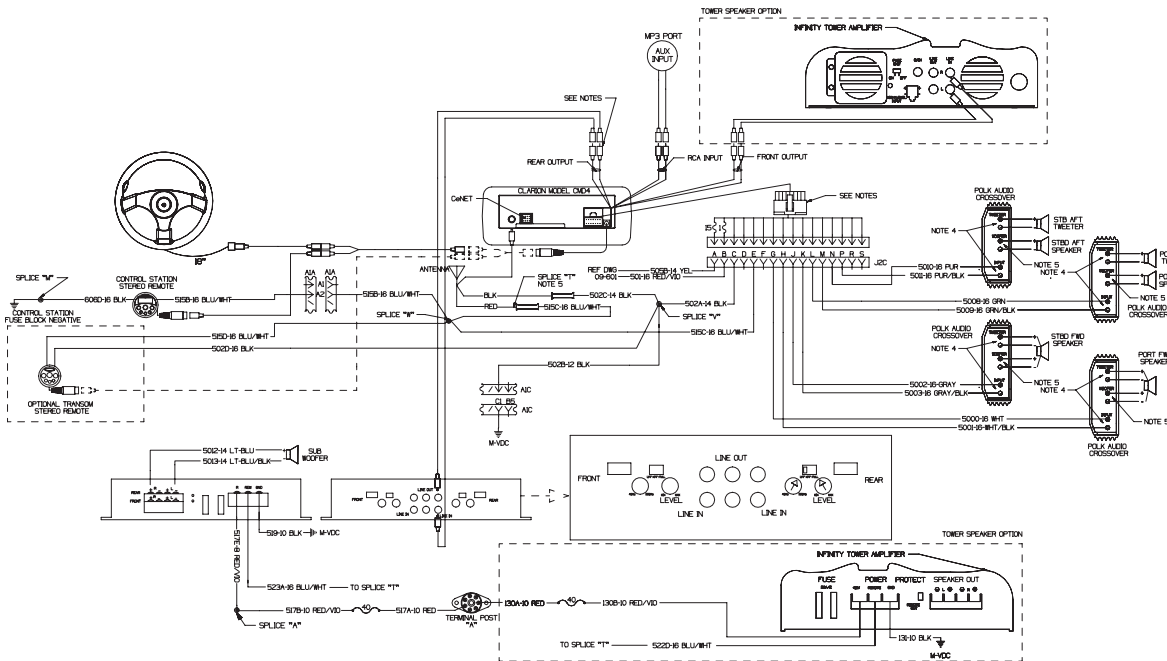


WINDLASS WIRING DIAGRAM
DRAWING NO. 09-614

(Fig. 15.1)

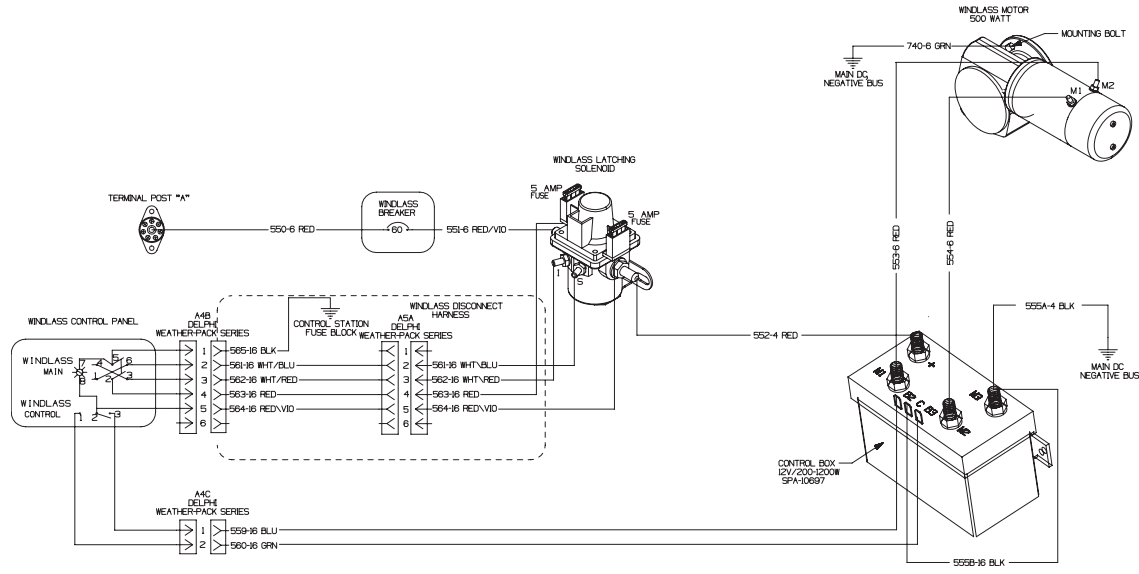

SMARTCRAFT SYSTEM WIRING DIAGRAM
DRAWING NO. 09-710

(Fig. 15.2)

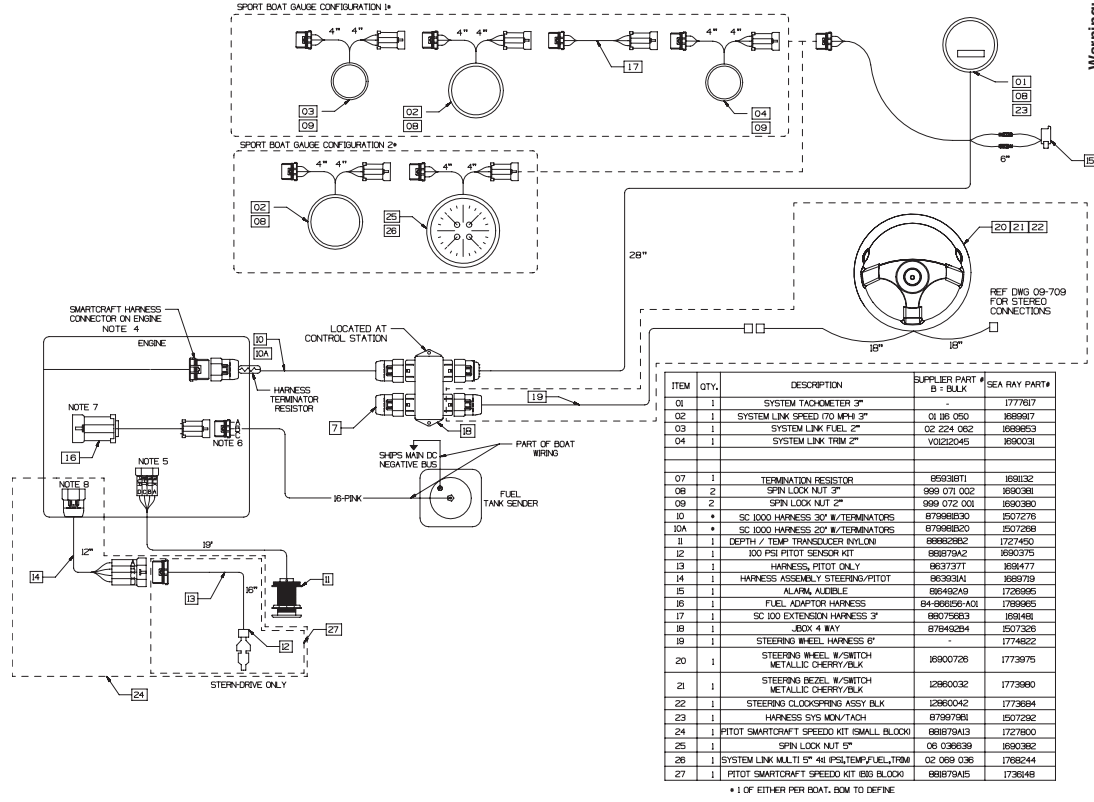


Warning:
DO NOT attempt to
work on the electrical system
of this boat without professional
assistance.

ELECTRICAL SCHEMATICS (CONTINUED)

SATELLITE STEREO SYSTEM DIAGRAM
DRAWING NO. 09-715

(Fig. 16.1)


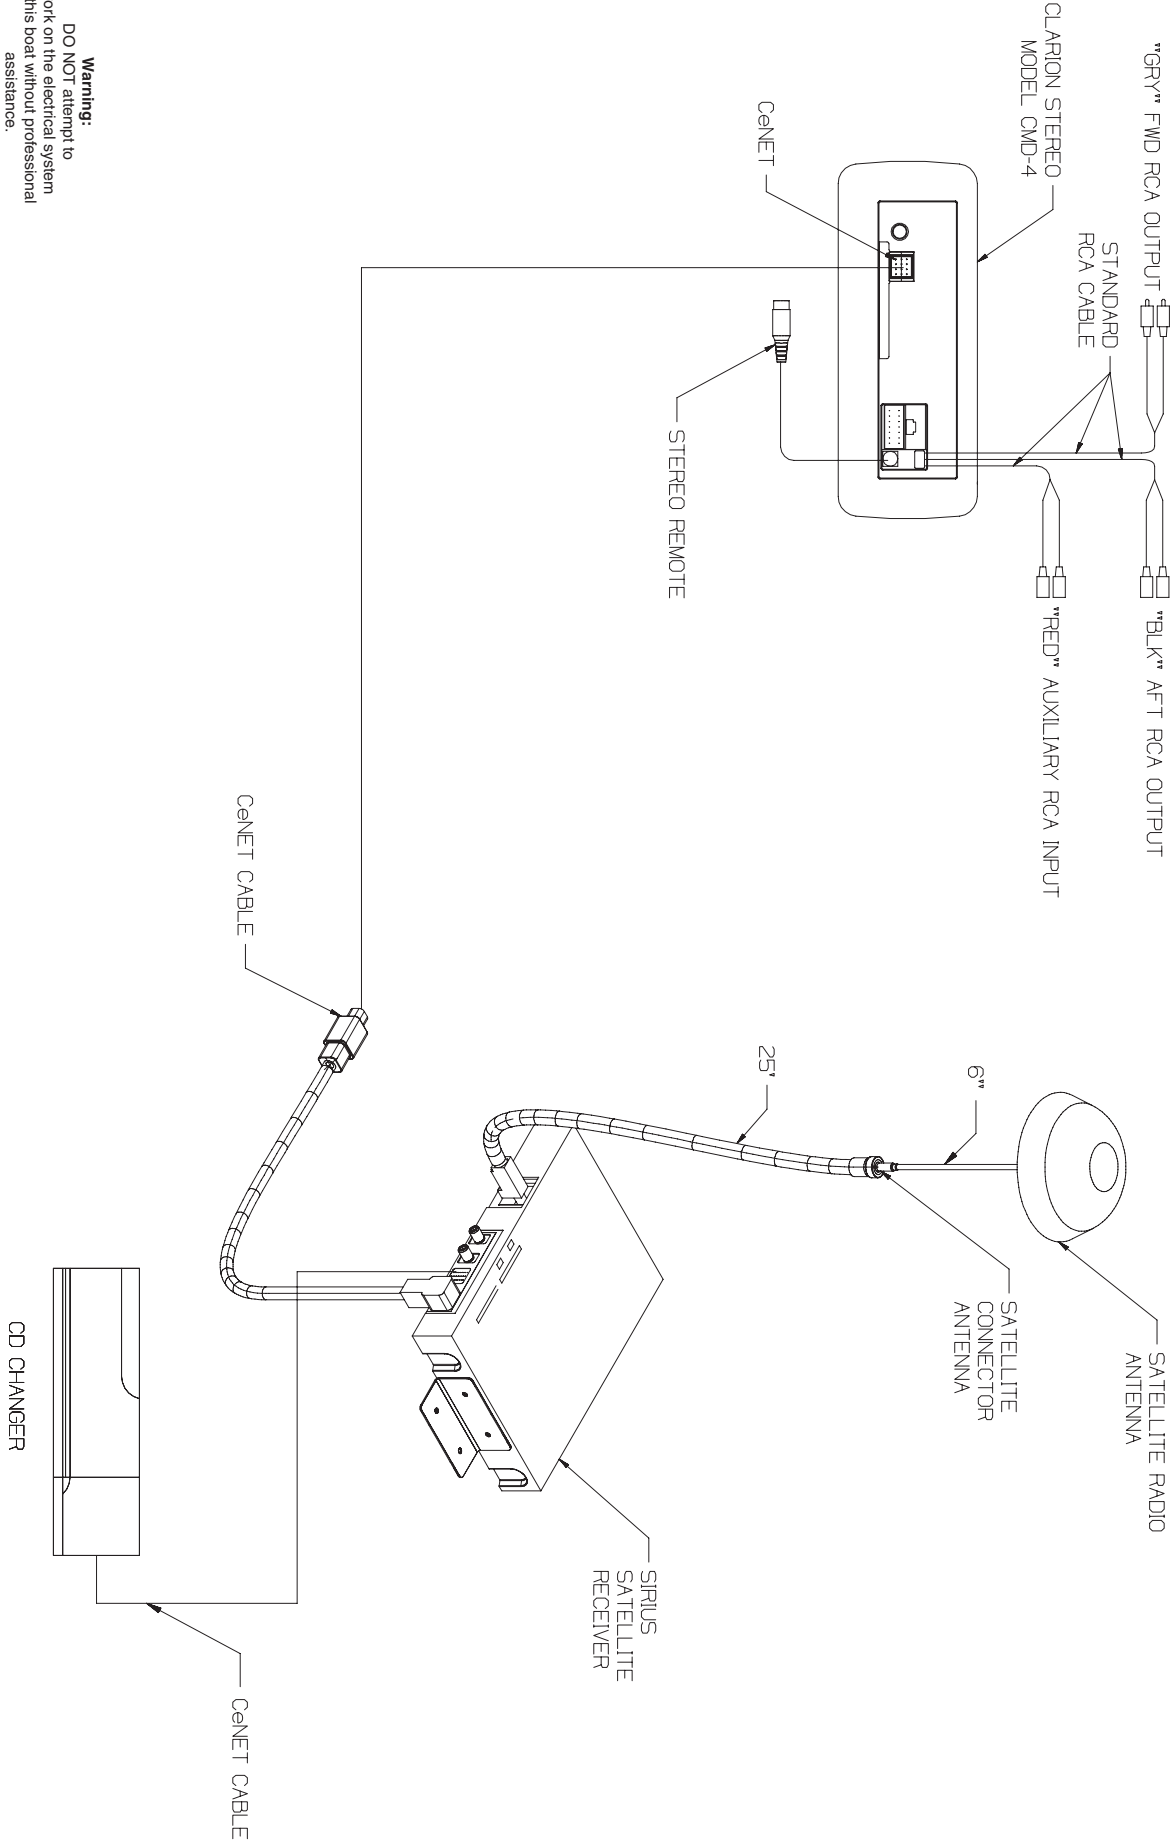


Warning:
DO NOT attempt to
work on the electrical system
of this boat without professional
assistance.



ELECTRICAL SCHEMATICS (CONTINUED)

NAVMAN SYSTEM DIAGRAM
DRAWING NO. 09-720
(FIG. 17.1)

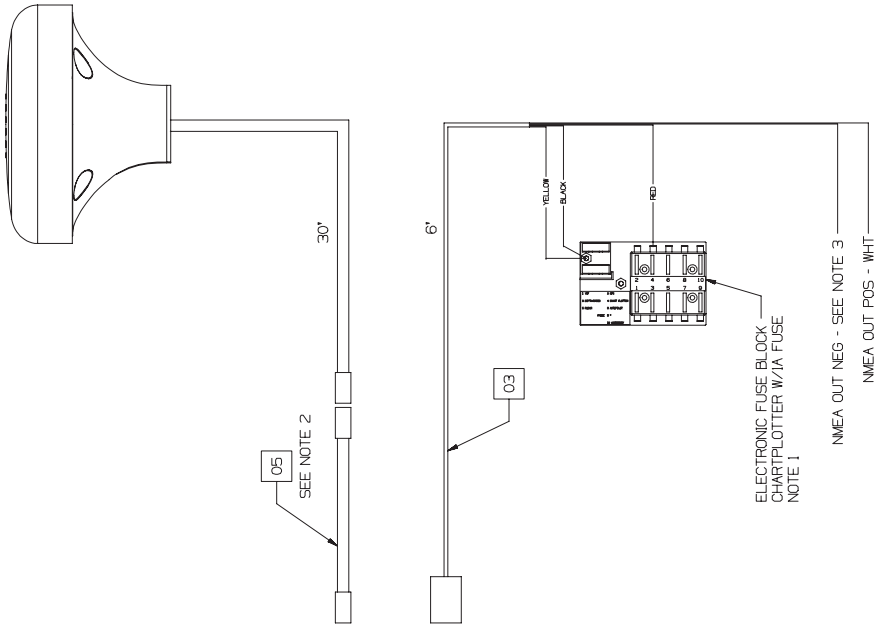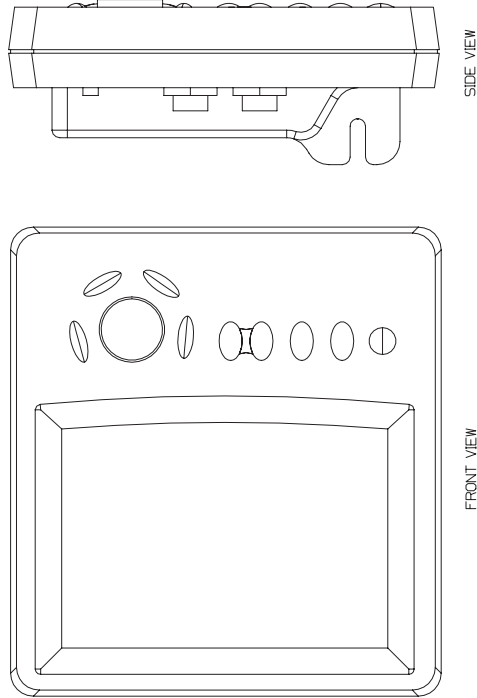

NAVMAN 5600


ITEM	SEA RAY P/N	VENDOR P/N	DESCRIPTION
01	177310	A/A03000R	CHART PLOTTER, NAVMAN 5600 CMPLT. PKG 5" DISPLY
02	177310	A/A03000R	CHART PLOTTER, NAVMAN 5600 5" DISPLY ONLY
03	1785965	A/A004046R	ANTENNA, GPS NAVMAN 1330
04	1773108	CB000140R	HARNESS, NAVMAN POWER CABLE
05	---	---	---
06	1773109	A/A002408R	HARNESS, GPS EXT. CABLE

NAVMAN 5500

ITEM	SEA RAY P/N	VENDOR P/N	DESCRIPTION
01	1772859	A/A002950R	CHART PLOTTER, NAVMAN 5500 CMPLT. PKG 5" DISPLY
02	1773106	A/A002950R	CHART PLOTTER, NAVMAN 5500 5" DISPLY ONLY
03	1785965	A/A004046R	ANTENNA, GPS NAVMAN 1330
04	1773108	CB000140R	HARNESS, NAVMAN POWER CABLE
05	---	---	---
06	1773109	A/A002408R	HARNESS, GPS EXT. CABLE


Warning:
DO NOT attempt to
work on the electrical system
of this boat without professional
assistance.

 (Fig. 18.1)




ELECTRICAL SCHEMATICS (CONTINUED)

BILGE HARNESS
DRAWING NO. 09-871 (1 OF 2)
(FIG. 19.1)

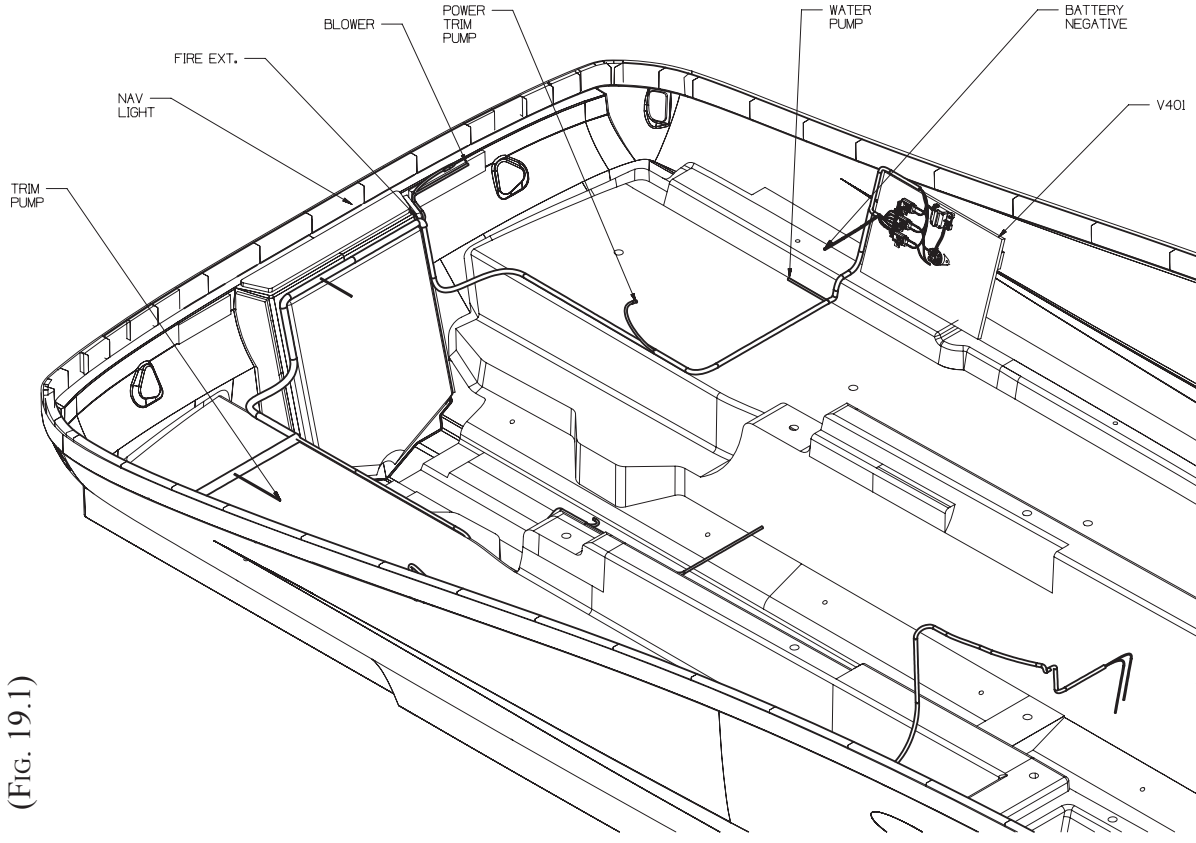

BILGE HARNESS
DRAWING NO. 09-871 (2 OF 2)
(FIG. 19.2)

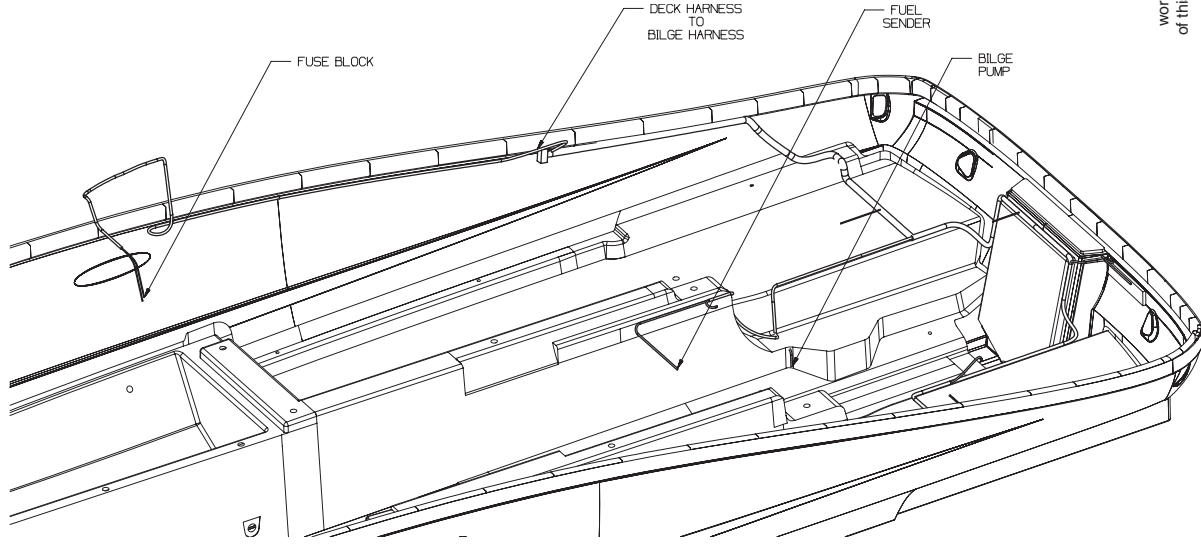


Warning:
DO NOT attempt to
work on the electrical system
of this boat without professional
assistance.




ELECTRICAL SCHEMATICS (CONTINUED)

DECK HARNNESS
DRAWING NO. 09-878 (1 OF 2)
(Fig. 20.1)

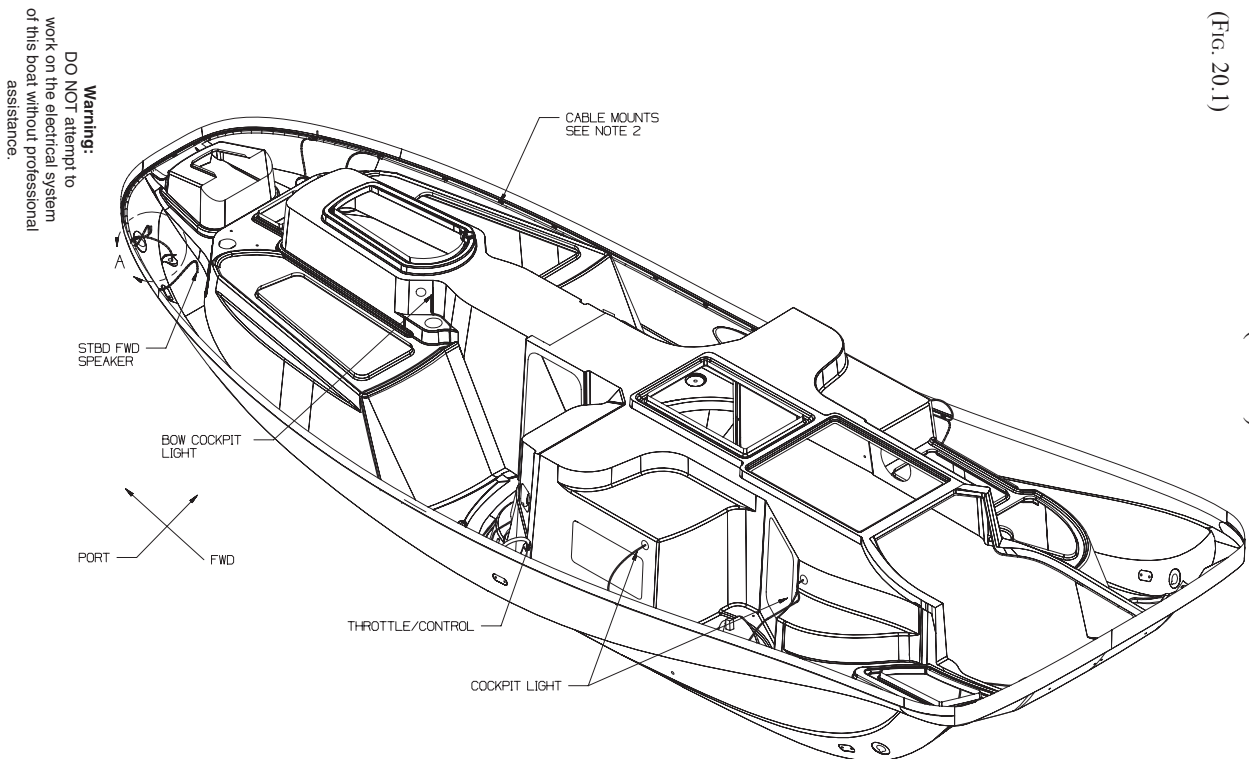


BILGE HARNNESS
DRAWING NO. 09-878 (2 OF 2)
(Fig. 20.2)

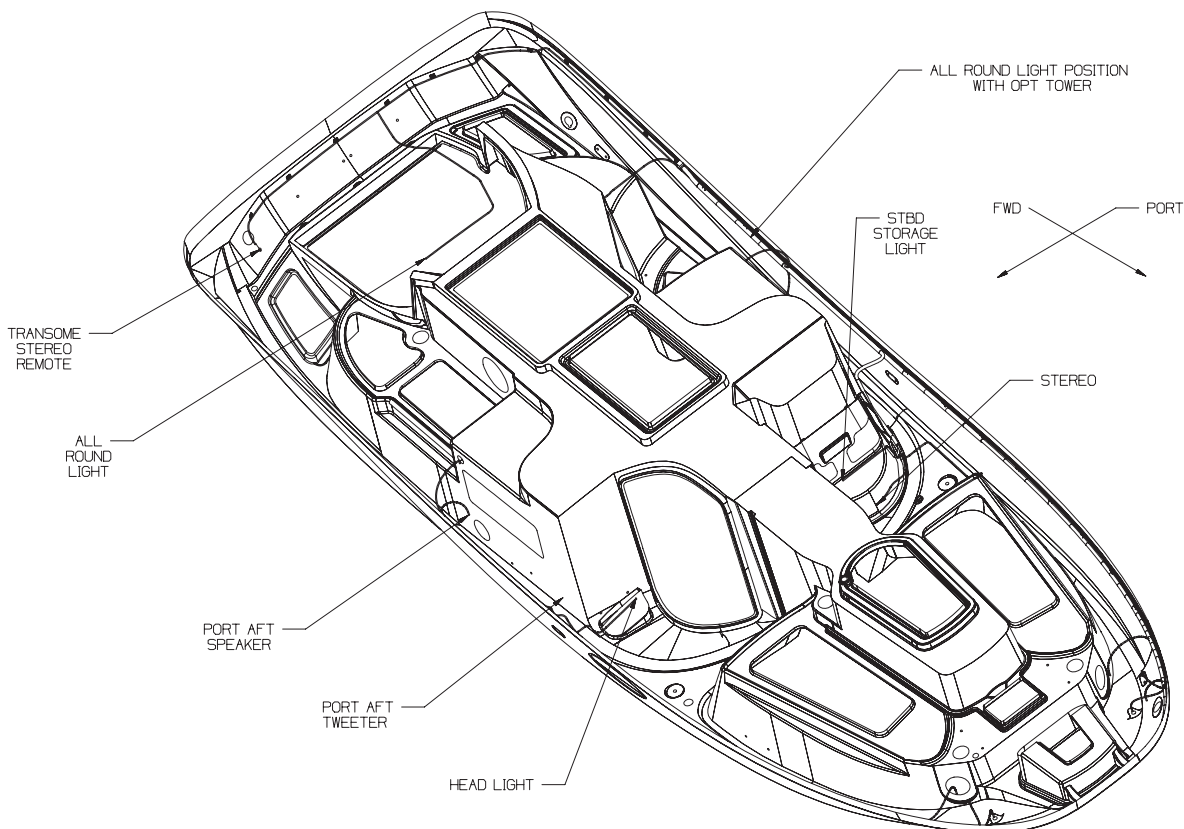

ELECTRICAL SCHEMATICS (CONTINUED)

WASTE SYSTEM HARNESS (OPTIONAL) DRAWING NO. 09-881

(Fig. 21.1)

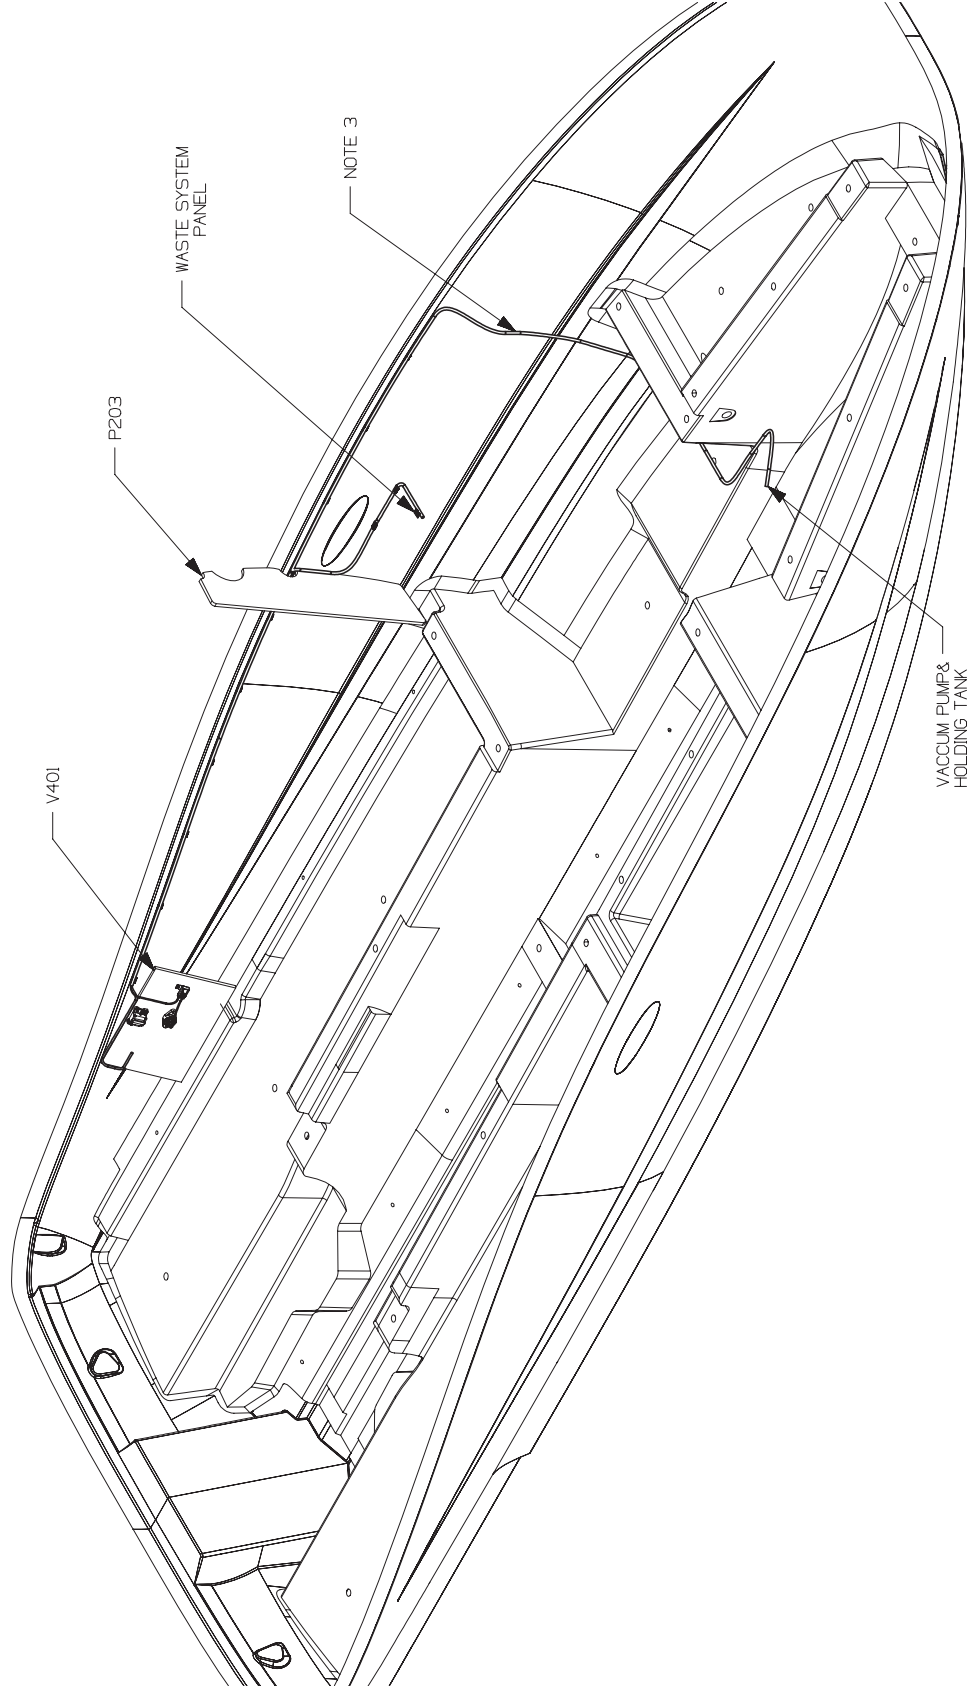

Warning:
DO NOT attempt to
work on the electrical system
of this boat without professional
assistance.



THIS PAGE INTENTIONALLY LEFT BLANK

Warning:
DO NOT attempt to
work on the electrical system
of this boat without professional
assistance.



INDEX

A

Anchor Lights.....7

B

Bilge Layout.....7

C

Canvas.....8
Clearances3
Cleats7
Control Station Switch Panel5

D

Deck Layout.....6
Dimensions.....3

E

Electrical Schematics9

F

Fire Extinguishing System.....8
Fuel System.....8

G

Gauge Layout5

H

Helm Layout.....5

L

Load Capacity.....1

N

Navigation Lights7

P

Passenger Locations1

S

Safety Label Locations2
Switch Layout5

T

Through-Hull Cutouts4

W

Water Sports Tower9
Water System8



THIS PAGE LEFT INTENTIONALLY BLANK

