


360 COBALT (2005-2006)


FRAME INSTALLATION

BIMINI

1. Measure along the inner circumference of the windshield beginning from the edge of the hinged center section as shown. These measurements are to the center of the mounts.

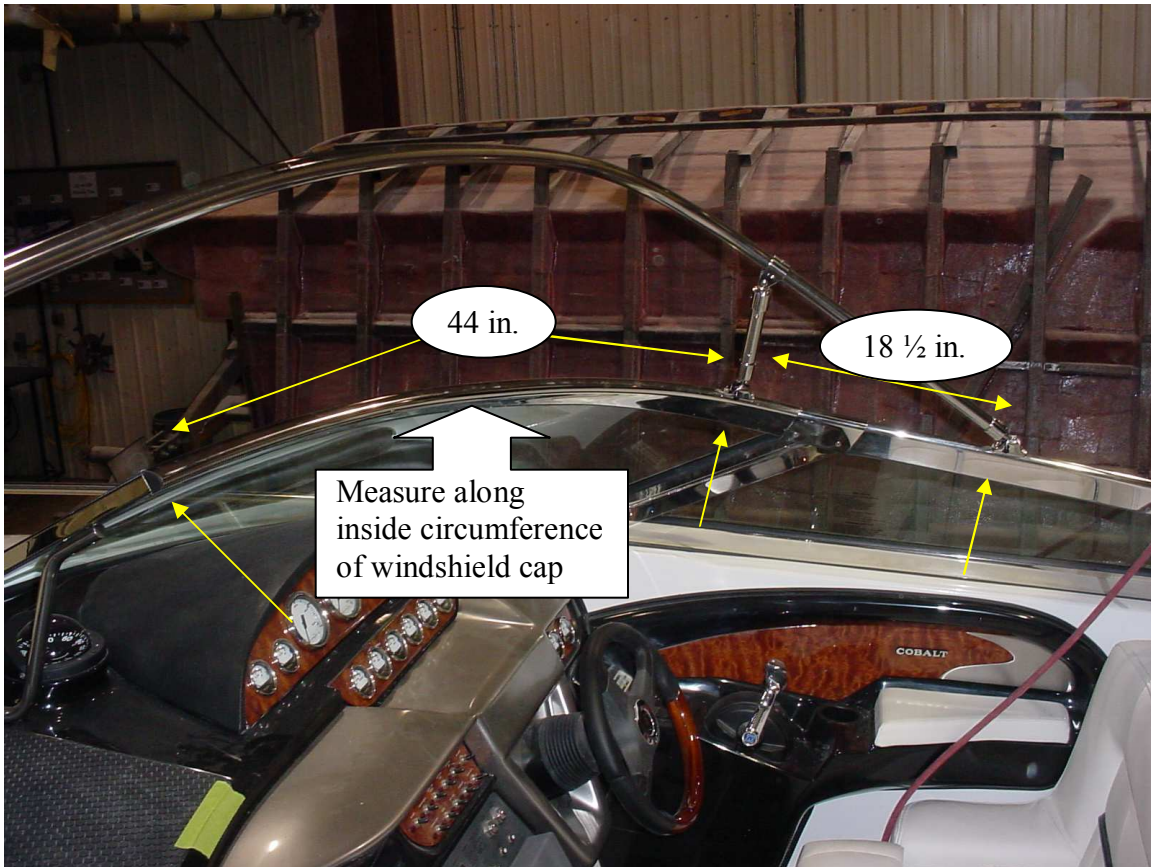

2. Install concave mounts with pull pins facing forward as shown. Be sure to capture the pull pin lanyard when screwing the mount in place.

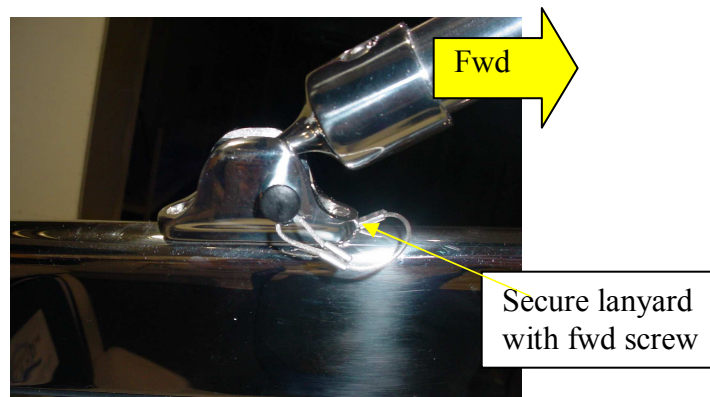

3. Remove pull pins, install frame, and reinstall pull pins.

SUNSHADE

1. Sunshade mounts install in same location as original Cobalt mounts.
2. Be sure to install mounts with pull pins facing aft.
3. Remove pull pins, install frame, and reinstall pull pins.

