

Great Lakes Boat Top Co.


Corporate Headquarters

15 Quality Circle • Vonore, Tennessee 37885 Office: (423) 884-6761 • Fax: (423) 884-6410

1998 MONTEREY

262 (#2)

MOUNTING INSTRUCTIONS

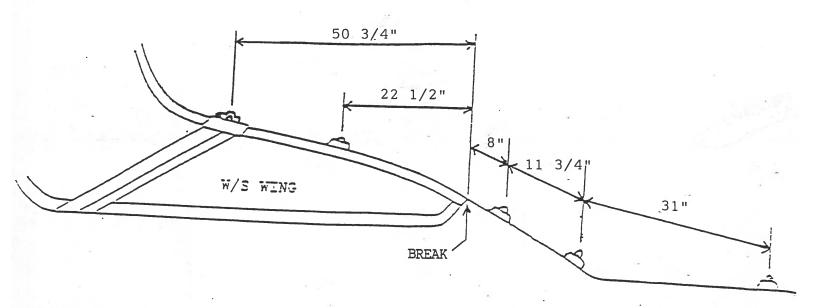

BIMINI TOP

MAIN MOUNT: SUPPORT MOUNT:

1/2" UP FROM REAR OF WING TIP TO CENTER OF MOUNT. 8" BACK FROM BREAK IN FIBERGLASS TO CENTER OF MOUNT. MOU ARE 1" FROM INSIDE EDGE OF DECK. MOUNT ANGLES TO INSIDE. 50 3/4" UP FROM REAR OF WING TIP TO CENTER OF EYE. USE

STRAP EYE:

FRONT SCREW IN W/S BRACKET FOR FRONT SCREW IN STRAP EYE.

CAMPER TOP

MAIN MOUNT:

SUPPORT MOUNT:

11 3/4" BACK FROM CENTER OF SUPPORT MOUNT TO CENTER OF MOUNT. MOUNTS ARE 1 1/2" FROM INSIDE EDGE OF DECK. 31" BACK FROM CENTER OF MAIN CAMPER MOUNT TO CENTER OF MOUNT. MOUNTS ARE 3/4" FROM OUTSIDE EDGE OF DECK.

PACKAGED HARDWARE

BIMINI TOP

- S.S. RADIUS MOUNTS (DRILLED) - S.S. ANGLE MOUNTS (DRILLED)

2 - CHROME STRAP EYES 8 - #8 X 5/8" PHILLIPS OVAL SCREWS 4 - #10 X 3/4" PHILLIPS OVAL SCREWS 6 - 7/8" WHITE SIDE CURTAIN SPACERS

CAMPER TOP

4 - S.S. STRAIGHT MOUNTS (DRILLED) 8 - #10 X 3/4" PHILLIPS OVAL SCREWS 2 - 7/8" WHITE SIDE CURTAIN SPACERS

1/30/98