


# 06SC 24

## 2006 SKIERS CHOICE

### SUPRA 24 SUNSPORT V & LAUNCH SSV FORWARD BIMINI TOP MOUNTING INSTRUCTION

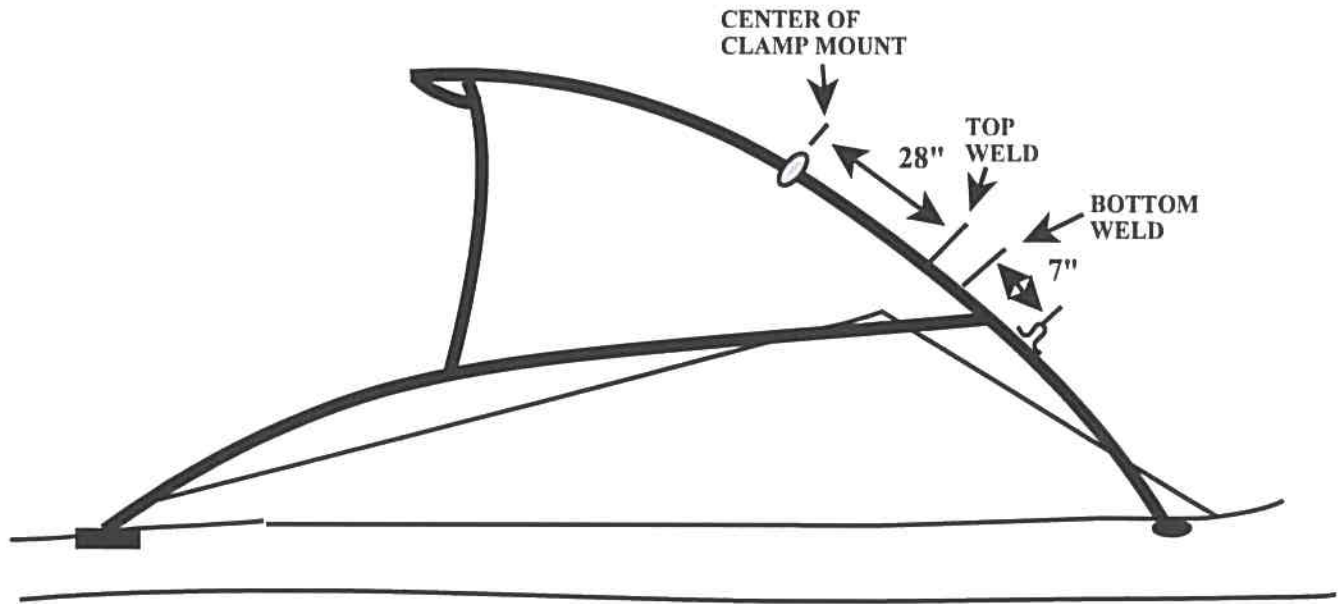

1) MEASURE UP 28" FROM CENTER OF TOP WELD FOR CENTER OF SIDE CLAMP MOUNT. CLAMP MOUNTS TO OUTSIDE OF BAR.

2) MEASURE DOWN 7" FROM MIDDLE OF BOTTOM WELD FOR CENTER OF STRAP EYES.

#### **PACKAGED HARDWARE**


- 2 - SIDE CLAMP MOUNTS W/ TWIST KNOBS - X-LARGE
- 2 - STRAP EYES
- 4 - #8 X 3/4" TEK SCREWS

7/14/05

# OLSC Supra

## 2006 SKIERS CHOICE

### SUPRA 24 SUNSPORT V, GRAVITY GAMES & LAUNCH SSV TOWER BIMINI TOP MOUNTING INSTRUCTION

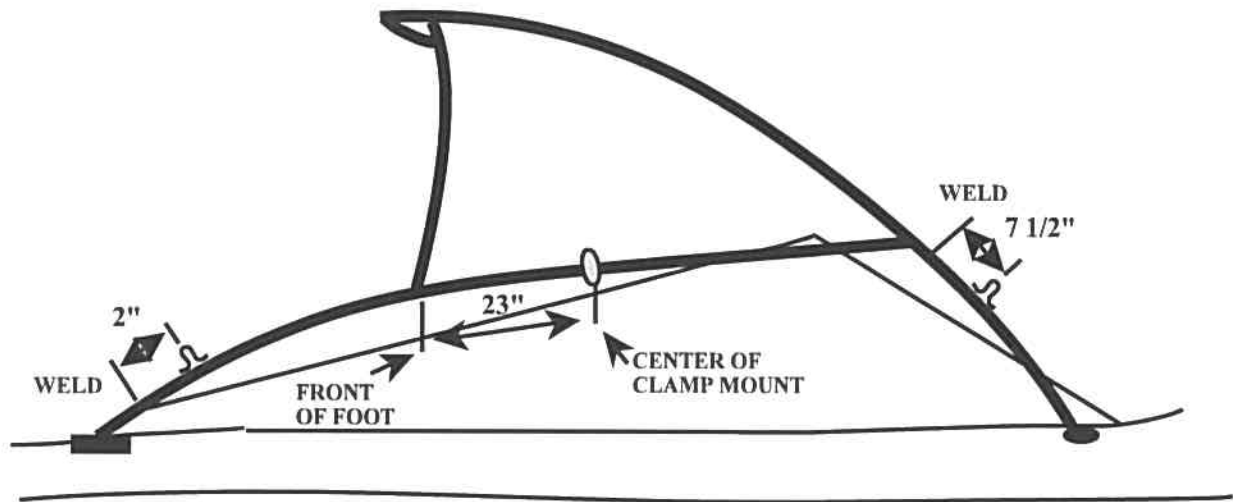

- 1) MEASURE FORWARD 23" FROM FRONT OF FOOT TO CENTER OF SIDE CLAMP MOUNT.
- 2) MEASURE 2" UP FROM WELD ON REAR LEG OF TOWER FOR CENTER OF REAR STRAP EYE.
- 3) MEASURE 7 1/2" DOWN FROM WELD ON FRONT LEG OF TOWER FOR CENTER OF FRONT STRAP EYE

#### **PACKAGED HARDWARE**

- 2 - SIDE CLAMP MOUNTS W/ TWIST KNOBS - X-LARGE
- 4 - STRAP EYES
- 8 - #8 TEK SCREWS

7/6/05